


04

RC51

**2004
Honda RC51
OWNER'S MANUAL**

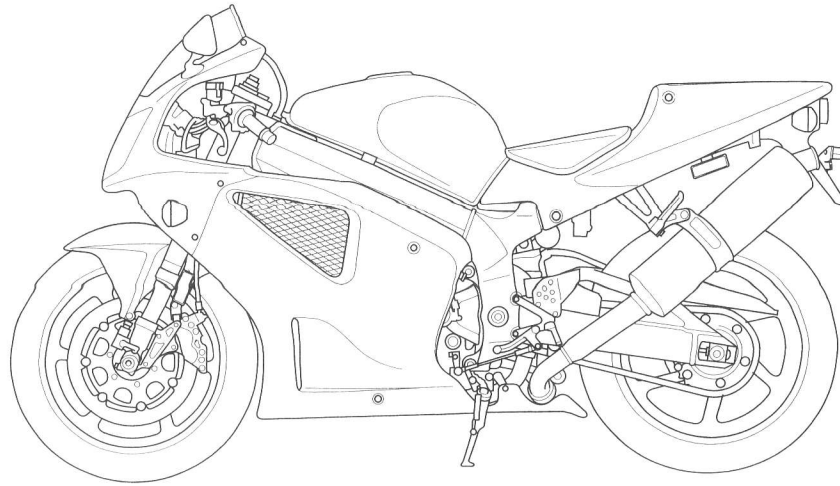

Introduction

Congratulations on choosing your Honda motorcycle.

When you own a Honda, you're part of a worldwide family of satisfied customers — people who appreciate Honda's reputation for building quality into every product.

Before riding, take time to get acquainted with your motorcycle and how it works. To protect your investment, we urge you to take responsibility for keeping your motorcycle well maintained. Scheduled service is a must, of course. But it's just as important to observe the break-in guidelines, and perform all pre-ride and other periodic checks detailed in this manual.

We also recommend that you read this owner's manual before you ride. It's full of facts, instructions, safety information, and helpful tips. To make it easy to use, the manual contains a detailed list of topics at the beginning of each section, and both an in-depth table of contents and an index at the back of the book.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your Honda, other property, or the environment.

Introduction

Read the Warranties Booklet (page 217) thoroughly so you understand the coverages that protect your new Honda and are aware of your rights and responsibilities.

If you have any questions, or if you ever need special service or repairs, remember that your Honda dealer knows your motorcycle best and is dedicated to your complete satisfaction.

Please report any change of address or ownership to your Honda dealer so we will be able to contact you concerning important production information.

You may also want to visit our website at www.honda.com.

Happy riding!

California Proposition 65 Warning

WARNING: This product contains or emits chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.


A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, we have provided operating procedures and other information on labels and in this manual. This information alerts you to potential hazards that could hurt you or others.

Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgment.

You will find important safety information in a variety of forms, including:

- **Safety Labels** — on the motorcycle.
- **Safety Messages** — preceded by a safety alert symbol  and one of three signal words: **DANGER**, **WARNING**, or **CAUTION**.

These signal words mean:

Safety Messages

A Few Words About Safety

DANGER

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

WARNING

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

CAUTION

You **CAN** be **HURT** if you don't follow instructions.

- **Safety Headings** — such as Important Safety Reminders or Important Safety Precautions.
- **Safety Section** — such as Motorcycle Safety.
- **Instructions** — how to use this motorcycle correctly and safely.

This entire manual is filled with important safety information — please read it carefully.

Safety Messages

Contents

These pages give an overview of the contents of your owner's manual. The first page of each section lists the topics covered in that section.

Motorcycle Safety..... 1

Important safety information you should know, plus a look at the safety-related labels on your motorcycle.

Instruments & Controls..... 9

The location and function of indicators, gauges, and controls on your motorcycle and operating instructions for various controls and features.

Before Riding..... 29

The importance of wearing a helmet and other protective gear, how to make sure you and your motorcycle are ready to ride, and important information about loading.

Basic Operation & Riding..... 39

How to start and stop the engine, shift gears, and brake. Also, riding precautions and important information about riding with a passenger or cargo.

Servicing Your Honda 57

Why your motorcycle needs regular maintenance, what you need to know before servicing your Honda, an owner maintenance schedule, and instructions for specific maintenance and adjustment items.

Tips..... 157

How to store and transport your motorcycle and how to be an environmentally-responsible rider.

Taking Care of the Unexpected..... 163

What to do if you have a flat tire, your engine won't start, etc.

Technical Information 193

ID numbers, technical specifications, and other technical facts.

Consumer Information..... 213

Information on warranties, emission controls, how to get Honda service manuals, and...

“Reporting Safety Defects” 222**Table of Contents 224**

Sequential listing of topics in this owner's manual.

Index..... 228**Quick Reference**

Handy facts about fuel, engine oil, tire sizes, and air pressures.

This section presents some of the most important information and recommendations to help you ride your motorcycle safely. Please take a few moments to read these pages. This section also includes information about the location of safety labels on your motorcycle.

Important Safety Information	2
Accessories & Modifications	5
Safety Labels	7

Important Safety Information

Your motorcycle can provide many years of service and pleasure — if you take responsibility for your own safety and understand the challenges you can meet while riding.

There is much that you can do to protect yourself when you ride. You'll find many helpful recommendations throughout this manual. The following are a few that we consider most important.

Always Wear a Helmet

It's a proven fact: helmets significantly reduce the number and severity of head injuries. So always wear an approved motorcycle helmet and make sure your passenger does the same. We also recommend that you wear eye protection, sturdy boots, gloves, and other protective gear (page 30).

Take Time to Learn & Practice

Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice in a safe area until you build your skills and get accustomed to the motorcycle's size and weight.

Because many accidents involve inexperienced or untrained riders, we urge all riders to take a certified course approved by the Motorcycle Safety Foundation (MSF). See page 32 .

Ride Defensively

The most frequent motorcycle collision happens when a car turns left in front of a motorcycle. Another common situation is a car moving suddenly into your lane.

Always pay attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or make an evasive maneuver. For other riding tips, see the booklet, *You and Your Motorcycle: Riding Tips and Practice Guide*, which came with your new motorcycle (USA only).

Make Yourself Easy to See

Some drivers do not see motorcycles because they are not looking for them. To make yourself more visible, wear bright reflective clothing, position yourself so other drivers can see you, signal before turning or changing lanes, and use your horn when it will help others notice you.

Important Safety Information

Ride within Your Limits

Pushing limits is another major cause of motorcycle accidents. Never ride beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, fatigue, and inattention can significantly reduce your ability to make good judgments and ride safely.

Don't Drink and Ride

Alcohol and riding don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and ride, and don't let your friends drink and ride either.

Keep Your Honda in Safe Condition

It's important to keep your motorcycle properly maintained and in safe riding condition. To help avoid problems, inspect your motorcycle before every ride and perform all recommended maintenance. Never exceed load limits (page 37), and do not modify your motorcycle (page 6) or install accessories that would make your motorcycle unsafe (page 5).

Modifying your motorcycle or using non-Honda accessories can make your motorcycle unsafe. Before you consider making any modifications or adding an accessory, be sure to read the following information.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding accessories and modifications.

Accessories

We strongly recommend that you use only genuine Honda accessories that have been specifically designed and tested for your motorcycle. Because Honda cannot test all other accessories, you must be personally responsible for proper selection, installation, and use of non-Honda accessories.

Check with your Honda dealer for assistance and always follow these guidelines:

- Make sure the accessory does not obscure any lights, reduce ground clearance and lean angle, limit suspension travel or steering travel, alter your riding position, or interfere with operating any controls.

- Do not add any electrical equipment that will exceed the motorcycle's electrical system capacity (page 201). A blown fuse can cause a loss of lights or engine power (page 186).
- Do not pull a trailer or sidecar with your motorcycle. This motorcycle was not designed for these attachments, and their use can seriously impair your motorcycle's handling.

Modifications


We strongly advise you not to remove any original equipment or modify your motorcycle in any way that would change its design or operation. Such changes could seriously impair your motorcycle's handling, stability, and braking, making it unsafe to ride.


Removing or modifying your lights, exhaust system, emission control system, or other equipment can also make your motorcycle illegal.

Safety Labels

Safety labels on your motorcycle either warn you of potential hazards that could cause serious injury or they provide important safety information. Read these labels carefully and don't remove them.

If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

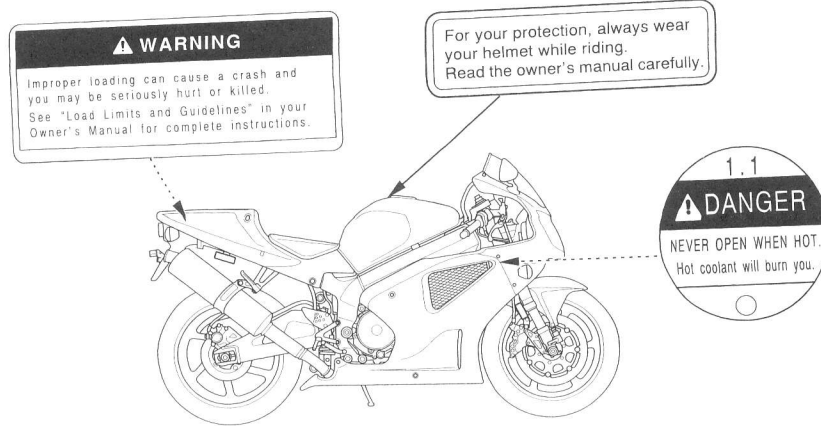

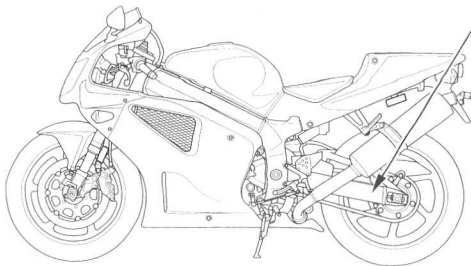

< For USA >

TIRE INFORMATION			
COLD TIRE PRESSURES : [UP TO MAXIMUM WEIGHT CAPACITY]	FRONT	250kPa	2.50kg/cm 36psi.
	REAR	250kPa	2.50kg/cm 42psi.
[UP TO 90kg (200lbs.) LOAD]	FRONT	250kPa	2.50kg/cm 36psi.
	REAR	250kPa	2.50kg/cm 42psi.
MAXIMUM WEIGHT CAPACITY :	166	kg	(366 lbs.)
TIRE SIZE :	FRONT 120/70ZR17M/C (58W) REAR 190/50ZR17M/C (73W)		
TIRE BRAND	FRONT	REAR	Read Owner's Manual
	DUNLOP	D208N	
	METZELER MEZIH FRONT RACING MEZIH RACING		THIS MOTORCYCLE IS EQUIPPED WITH TUBELESS TIRES.
MIN.RECOMMEND TIRE CENTER TREAD DEPTH			
FRONT 1.5mm (0.06in.) REAR 2.0mm (0.08in.)			

< For CANADA >


TIRE INFORMATION			
COLD TIRE PRESSURES :			
[UP TO MAXIMUM WEIGHT CAPACITY]	FRONT	250kPa	2.50kg/cm 36psi.
	REAR	250kPa	2.50kg/cm 42psi.
[UP TO 90kg (200lbs.) LOAD]	FRONT	250kPa	2.50kg/cm 36psi.
	REAR	250kPa	2.50kg/cm 42psi.
MAXIMUM WEIGHT CAPACITY : 170 kg (375 lbs.)			
TIRE SIZE : FRONT 120/70ZR17M/C (58W) REAR 190/50ZR17M/C (73W)			
TIRE BRAND FRONT		REAR	
DUNLOP		D208N	
METZELER MEZIH FRONT RACING		MEZIH RACING	
Read Owner's Manual			
THIS MOTORCYCLE IS EQUIPPED WITH TUBELESS TIRES.			
MIN.RECOMMEND TIRE CENTER TREAD DEPTH			
FRONT 1.5mm (0.06in.)		REAR 2.0mm (0.08in.)	

This section shows the location of all gauges, indicators, and controls you would normally use before or while riding your motorcycle.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.


Component Locations	10
Gauges, Indicators & Displays.....	13
Multi-function Display.....	19
Coolant Temperature Meter	20
Speedometer	22
Odometer	22
Tripmeter	22
Changing the Speed Unit	23
Controls & Features	
Choke Knob.....	24
Ignition Switch	25
Start Button.....	26
Engine Stop Switch	26
Headlight Dimmer Switch	27
Turn Signal Switch.....	27
Horn Button	28
Multi-function Select and Reset Button	28

Component Locations

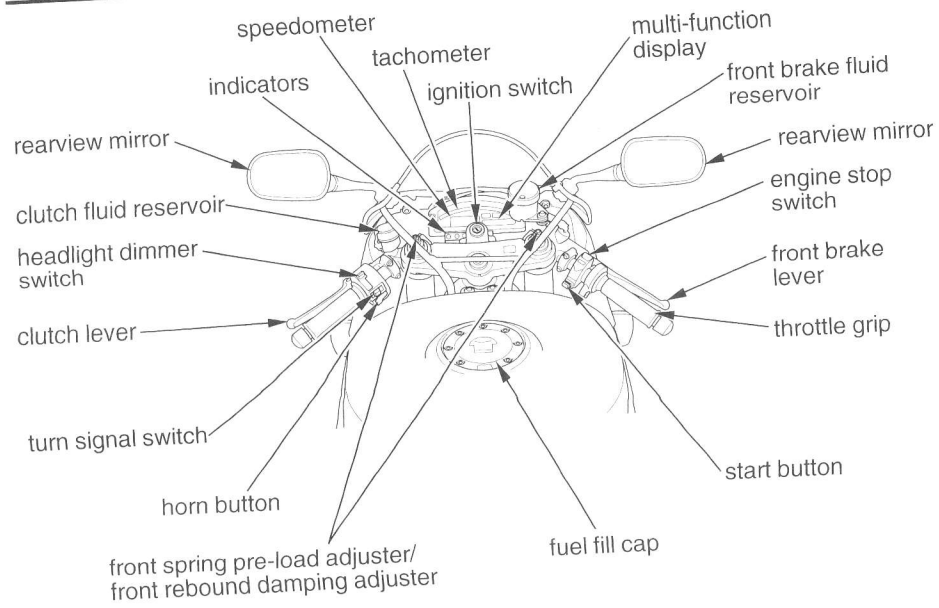


10 Instruments & Controls

Component Locations

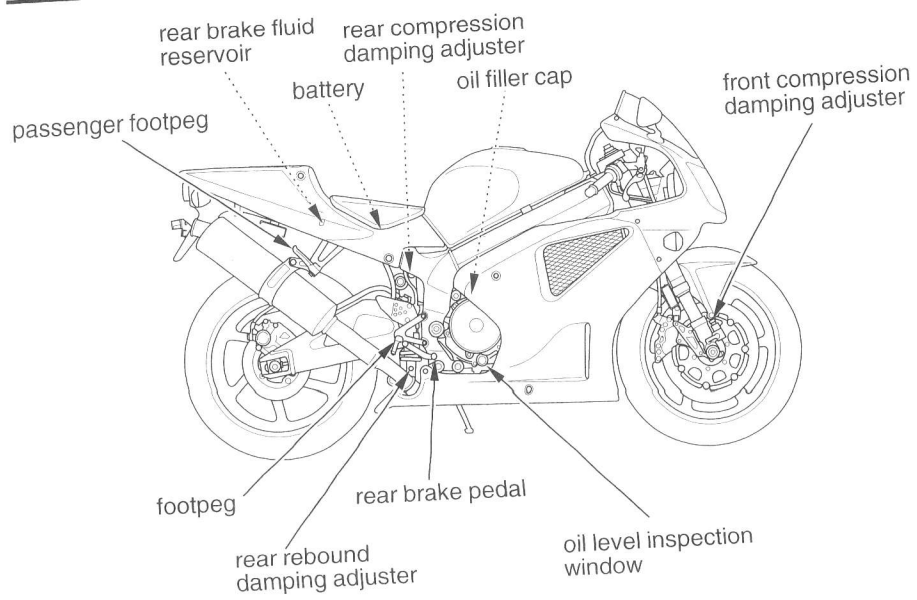


Component Locations

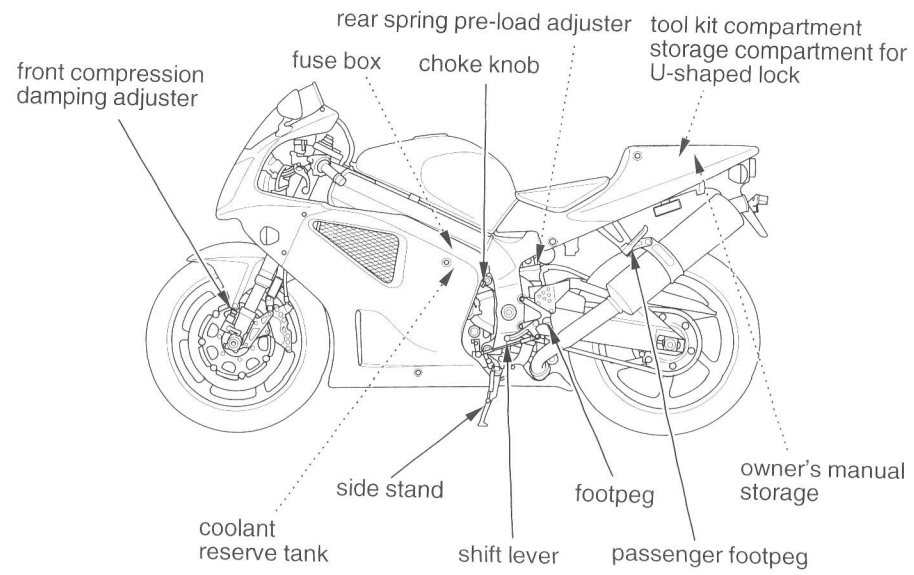

12 Instruments & Controls

The gauges, indicators and displays on your motorcycle keep you informed, alert you to possible problems, and make your riding safer and more enjoyable. Refer to the gauges, indicators and displays frequently. Their functions are described on the following pages.

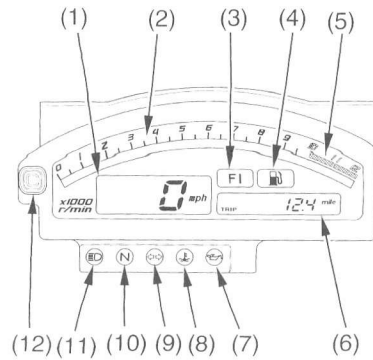

- (1) speedometer
- (2) tachometer
- (3) PGM-FI malfunction indicator lamp (MIL)
- (4) fuel reserve indicator
- (5) tachometer red zone
- (6) multi-function display
- (7) low oil pressure indicator
- (8) coolant temperature indicator
- (9) turn signal indicator
- (10) neutral indicator
- (11) high beam indicator
- (12) multi-function select and reset button

Lamp Check

The low oil pressure indicator and PGM-FI malfunction indicator lamp come on when you turn the ignition switch ON so you can check that they are working. The indicators remain on until after the engine is started. These indicators are identified in the table on page 16 — 18 with the words: *Lamp Check*.

When applicable, the high beam and neutral indicators come on when you turn the ignition switch ON and remain on until you select the low beam or shift out of neutral.


If one of these indicators does not come on when it should, have your Honda dealer check for problems.

Display Check

When the ignition switch is turned ON, the display will temporarily show all the modes and digital segments so you can make sure the liquid crystal display is functioning properly.

The displays are identified in the table on page 17 with the words: *Display Check*.

If any part of these displays does not come on when it should, have your Honda dealer check for problems.

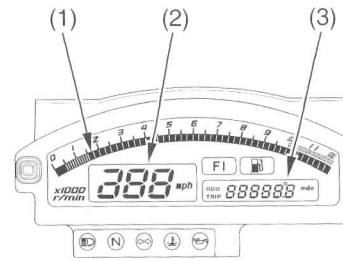

- (1) tachometer
- (2) speedometer
- (3) multi-function display

Gauges, Indicators & Displays

1	speedometer	Shows riding speed in miles or kilometers per hour (page 22).
2	tachometer	Shows engine speed in revolutions per minute (rpm).
3	PGM-FI malfunction indicator lamp (MIL) (red)	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and the engine stop switch is at RUN. If the indicator comes on at any other time, reduce speed and take your motorcycle to a Honda dealer as soon as possible. <i>Lamp Check</i> .
4	fuel reserve indicator (amber)	When this indicator comes on while riding, fuel reserved in the tank is about: 1.19 US gal (4.5 l)
5	tachometer red zone	Shows excessive engine rpm range (indicated from the beginning of the tachometer red zone) in which operation may damage the engine. Do not let the tachometer rpm display enter the red zone.

Gauges, Indicators & Displays

6	multi-function display	The display includes the following functions: <i>Display Check.</i>
	odometer	Shows the total miles or kilometers ridden (page 22).
	tripmeter	Shows the number of miles or kilometers ridden since you last reset the meter. To zero (0) the tripmeter, press the multi-function select and reset button (page 28).
	coolant temperature meter	Shows coolant temperature (page 20). USA : Fahrenheit (°F), Canada : Centigrade (°C).
7	low oil pressure indicator (red)	Lights when engine oil pressure is low enough to cause engine damage. If the indicator lights, pull safely to the side of the road. See page 185 for instructions and cautions. <i>Lamp Check.</i>
8	coolant temperature indicator (red)	Lights when the coolant is over the specified temperature. If the indicator comes on, pull safely to the side of the road. See page 183 for instructions and cautions. <i>Lamp Check.</i>

Gauges, Indicators & Displays

9	turn signal indicator (amber)	Flashes when either turn signal operates.
10	neutral indicator (green)	Lights when the transmission is in neutral. <i>Lamp Check.</i>
11	high beam indicator (blue)	Lights when the headlight is on high beam. <i>Lamp Check.</i>
12	multi-function select and reset button	Selects display of the odometer, tripmeter and coolant temperature meter (page 28).


18 Instruments & Controls

Multi-function Display

The multi-function display (1) includes the following functions:

- odometer
- tripmeter
- coolant temperature meter

The tripmeter will reset if the battery is disconnected.

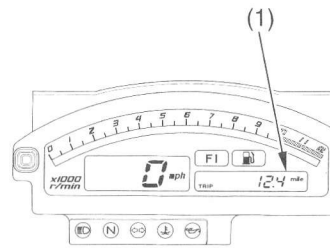


(1) multi-function display

Coolant Temperature Meter

The coolant temperature meter (1) shows the coolant temperature digitally.

USA : Fahrenheit (°F),
Canada : Centigrade (°C).

If the tripmeter is displayed, push the multi-function select and reset button (2) to display the coolant temperature.

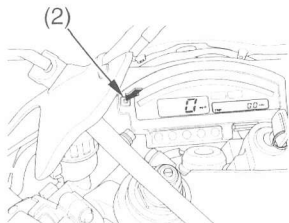

Temperature Display

Below 94 °F (34 °C)	“--” is displayed
Between 95 °F — 270 °F (35 °C — 132 °C)	Actual coolant temperature is displayed.
Above 270 °F (132 °C)	The display remains “270 °F (132 °C)”

〈 For USA 〉



〈 For Canada 〉



- (1) coolant temperature meter
(2) multi-function select and reset button

Overheating Message:

When the coolant temperature reaches 251°F (122°C), the numbers in the temperature display start flashing and the coolant temperature indicator (3) comes on.


If this occurs, stop the engine and check the reserve tank coolant level. Read pages 99 — 102 and do not ride the motorcycle until the problem has been corrected.

If the coolant temperature reaches 251°F (122°C) while the odometer and tripmeter display is selected, the display will automatically switch to coolant temperature.


NOTICE

Continuing to ride with an overheated engine can cause serious engine damage.

〈 For USA 〉

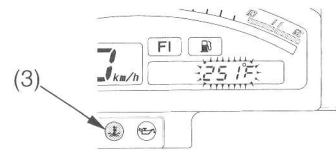

〈 For Canada 〉

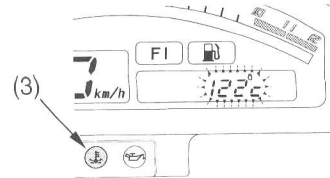

(3) coolant temperature indicator

Speedometer


The speedometer (1) shows riding speed in miles or kilometers per hour.

Odometer

The odometer (2) shows the total miles or kilometers ridden.

Tripmeter

The tripmeter (3) shows number of miles or kilometers ridden since you last reset the meter.

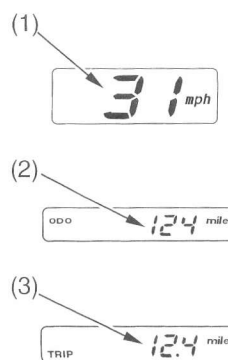

- (1) speedometer
- (2) odometer
- (3) tripmeter


Changing the Speed Unit

(USA Only)

The speedometer displays both “mph” and “km/h.”

Push and hold the multi-function select and reset button (4) to select “mph” or “km/h.”

This function only operates while the display is in the “ODO” mode.

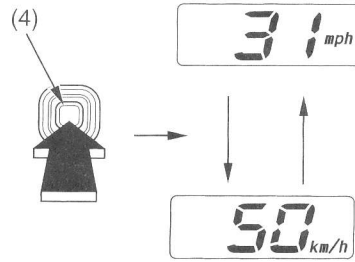


(4) multi-function select and reset button

Choke Knob



LEFT SIDE

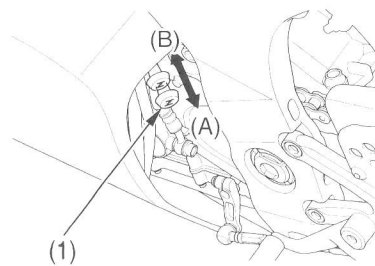

(1) choke knob

(A) fully ON
(B) fully OFF


The choke knob may be used when starting the engine. See page 42 .

Ignition Switch

The ignition switch is used for starting and stopping the engine (page 41) and to lock the steering for theft prevention (page 51). Insert the key and turn it to the right for the ON position. Push down on the key and turn it to the left to the LOCK (steering lock) position.

Key Position	Function
ON	Electrical circuits on.
OFF	No electrical circuits function.
LOCK (steering lock)	No electrical circuits function. Locks the steering head.

FRONT

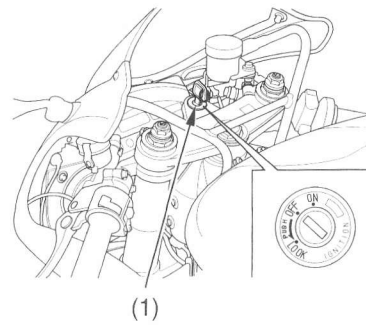

(1) ignition switch

To unlock the steering lock, insert and push down on the key and turn it to the right to the OFF position.

Start Button




The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 42.

When the start button is pushed, the starter motor will crank the engine; the headlight will automatically go out, but the taillight will stay on.

Engine Stop Switch



RIGHT HANDLEBAR

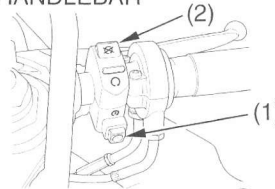

(1) start button

(2) engine stop switch

⊗ OFF

○ RUN

The engine stop switch (2) is used to stop the engine in an emergency. To operate, push the switch to the OFF position. The switch must be in the RUN position to start the engine, and it should normally remain in the RUN position even when the engine is OFF.


If your motorcycle is stopped with the ignition switch ON and the engine stop switch OFF, the headlight and taillight will remain on, resulting in battery discharge.

 
 
Headlight Dimmer Switch

The headlight dimmer switch (1) is used to change between the high and low beams of the headlight. To operate, turn the switch to HI for high beam, LO for low beam.

Turn Signal Switch

The turn signal switch (2) is used to signal a turn or a lane change. To operate, move the switch all the way in the proper direction and release it. The appropriate turn signal lights will start blinking. To cancel the light, push the switch in.

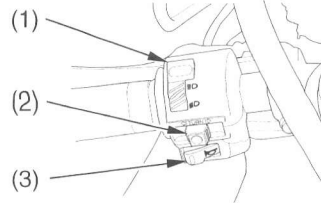

- (1) headlight dimmer switch  HI
- (2) turn signal switch  LO
- (3) horn button

Horn Button




The horn is used to alert other motorists. To operate, push the horn button (3).

Multi-function Select and Reset Button

The display (1) has three functions, odometer, tripmeter and temperature meter.


Push the button (2) to select the “ODO,” “TRIP” or “TEMP” mode.

To reset the tripmeter, push and hold the button with the display in the “TRIP” mode.

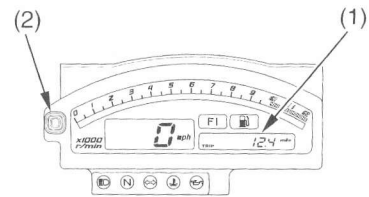

(1) multi-function display

(2) multi-function select and reset button

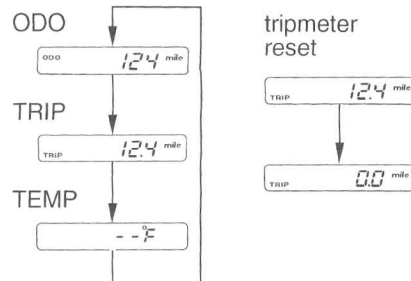

Before each ride, you need to make sure you and your Honda are both ready to ride. To help get you prepared, this section discusses how to evaluate your riding readiness, what items you should check on your motorcycle, and adjustments to make for your comfort, convenience, or safety. This section also includes important information about loading.

For information about adjusting the suspension on your Honda, see page 115.

Are You Ready to Ride ?	30
Protective Apparel.....	30
Rider Training	32
Is Your Motorcycle Ready to Ride ?	33
Pre-ride Inspection	33
Load Limit & Guidelines	36
Loading	36
Load Limits	37
Loading Guidelines	37

Are You Ready to Ride?

Before you ride your motorcycle for the first time, we urge you to:

- Read this owner's manual.
- Make sure you understand all the safety messages.
- Know how to operate all the controls.

Before each ride, be sure:

- You feel well and are in good physical and mental condition.
- You are wearing an approved motorcycle helmet (with chin strap tightened securely), eye protection, and other protective clothing.
- You don't have any alcohol or drugs in your system.

Make sure your passenger is ready to ride, too, and is wearing proper gear including a helmet.

If you must carry an extra helmet while riding, use a commercially-available elastic cord, strap, or net to secure the helmet to the seat.

Protective Apparel

For your safety, we strongly recommend that you always wear an approved motorcycle helmet, eye protection, boots, gloves, long pants, and a long-sleeved shirt or jacket whenever you ride.

Although complete protection is not possible, wearing proper gear can reduce the chance of injury when you ride.

Following are suggestions to help you choose the proper gear.

Helmets and Eye Protection

Your helmet is your most important piece of riding gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely. A bright-colored helmet and reflective strips can make you more noticeable in traffic.

An open-face helmet offers some protection, but a full-face helmet offers more. Regardless of the style, look for a DOT (Department of Transportation) sticker in any helmet you buy (USA only). Always wear a face shield or goggles to protect your eyes and help your vision.

⚠ WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Be sure you and your passenger always wear a helmet, eye protection, and other protective apparel when you ride.

Additional Riding Gear

In addition to a helmet and eye protection, we also recommend:

- Sturdy boots with non-slip soles to help protect your feet and ankles.
- Leather gloves to help protect your hands.

(cont'd)

Are You Ready to Ride?

- A motorcycle riding suit or jacket for comfort as well as protection. Bright-colored and reflective clothing can help make you more noticeable in traffic. Avoid loose clothes that could get caught on any part of your motorcycle.

Rider Training

Developing your riding skills is an on-going process. Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice riding the motorcycle in a safe area to build your skills. Do not ride in traffic until you get accustomed to the motorcycle's controls, and feel comfortable with its size and weight.

We urge all riders to take a certified course approved by the Motorcycle Safety Foundation (MSF). New riders should start with the basic course, and even experienced riders will find the advanced course beneficial. For information about the MSF training course nearest you, call the national toll-free number: (800) 446-9227.

Other riding tips can be found in the *Riding Tips* booklet that came with your motorcycle (USA only).

Is Your Motorcycle Ready to Ride?

Before each ride, it's important to inspect your motorcycle and make sure any problem you find is corrected. A pre-ride inspection is a must, not only for safety, but because having a breakdown, or even a flat tire, can be a major inconvenience.

WARNING

Improperly maintaining this motorcycle or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-ride inspection before every ride and correct any problems.

Pre-ride Inspection

Check the following items before you get on the motorcycle:

Tires Look at the tires. If a tire appears low, use an air pressure gauge to check its pressure. Also look for signs of damage or excessive wear (page 132).

Chain Check the condition of the chain. Adjust slack and lubricate as needed (page 139).

Is Your Motorcycle Ready to Ride?

*Leaks,
Loose
Parts*

Walk around your motorcycle and look for anything that appears unusual, such as a leak or loose cable.

Lights

Make sure the headlight, brake light, taillight, and turn signals are working properly.

If you are carrying a passenger or cargo, also check the following:

Load Limits Make sure you do not exceed the load limits (page 37).

Cargo Check that all cargo is secure.

Adjustments Adjust the suspension (pages 116, 120) according to your load.

Is Your Motorcycle Ready to Ride?

Check these items after you get on the motorcycle:

Throttle Rotate the throttle to check it moves smoothly without binding.

Brakes Pull the brake lever and press on the brake pedal to check that they operate normally.

Indicators Turn the ignition on and check for normal operation of the indicators (page 13).

If you haven't ridden the motorcycle in over a week, you should also check other items, such as the oil level and other fluids. See *Periodic Maintenance* (page 64). Periodic maintenance should also be done at least once a month, no matter how often you ride.

Remember, be sure to take care of any problem you find, or have your Honda dealer correct it before you ride.

Load Limits & Guidelines

Your motorcycle has been designed to carry you and one passenger. When you carry a passenger, you may feel some difference during acceleration and braking. But so long as you keep your motorcycle well-maintained, with good tires and brakes, you can safely carry loads within the given limits and guidelines.

However, exceeding the weight limit or carrying an unbalanced load can seriously impair your motorcycle's handling, braking, and stability. Non-Honda accessories, improper modifications, and poor maintenance can also reduce your safety margin.

Loading

How much weight you put on your motorcycle, and how you load it, are important to your safety. Anytime you ride with a passenger or cargo, you should be aware of the following information.

WARNING

Overloading or improper loading can cause a crash and you can be seriously hurt or killed.

Follow all load limits and other loading guidelines in this manual.

Load Limits

Following are the load limits for your motorcycle:

maximum weight capacity:

366 lbs (166 kg)

375 lbs (170 kg) (Canada only)

includes the weight of the rider, passenger, all cargo, and all accessories.

maximum cargo weight:

31 lbs (14 kg)

The weight of added accessories will reduce the maximum cargo weight you can carry.

Loading Guidelines

Your motorcycle is primarily intended for transporting you and a passenger. You may wish to secure a jacket or other small items to the seat when you are not riding with a passenger.

If you wish to carry more cargo, check with your Honda dealer for advice, and be sure to read the information regarding accessories on page 5.

Improperly loading your motorcycle can affect its stability and handling. Even if your motorcycle is properly loaded, you should ride at reduced speeds and never exceed 80 mph (130 km/h) when carrying cargo.

Load Limits & Guidelines

Follow these guidelines whenever you carry a passenger or cargo:

- Check that both tires are properly inflated (page 130).
- If you change your normal load, you may need to adjust the front suspension (page 116) and the rear suspension (page 120).
- To prevent loose items from creating a hazard, make sure that all cargo is tied down securely before you ride.
- Place cargo weight as low and close to the center of your motorcycle as possible.
- Balance cargo weight evenly on both sides.

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 204).

Safe Riding Precautions	40
Starting & Stopping the Engine	41
Preparation	41
Starting Procedure	42
Flooded Engine.....	44
Bank Angle Sensor Ignition Cut-off System.....	45
How to Stop the Engine	46
Shifting Gears.....	47
Braking	49
Parking	51
Riding with a Passenger or Cargo.....	55

Safe Riding Precautions

Before riding your motorcycle for the first time, please review the *Motorcycle Safety* section beginning on page 1, and the *Before Riding* section beginning on page 29 .

Even if you have ridden other motorcycles, take time to become familiar with how this motorcycle works and handles. Practice in a safe area until you build your skills and get accustomed to the motorcycle's size and weight.

Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your motorcycle's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

Your motorcycle can be started with the transmission in gear by pulling in the clutch lever before operating the starter.

Your motorcycle is equipped with a side stand ignition cut-off system. If the side stand is down—the engine cannot be started unless the transmission is in neutral. If the side stand is up—the engine can be started in neutral, or in gear with the

clutch lever pulled in. After starting with the side stand down, the engine will stop if the transmission is put in gear before raising the side stand.

Preparation

Before starting, insert the key, turn the ignition switch ON, and confirm the following:

- The transmission is in NEUTRAL (neutral indicator light ON).
- The engine stop switch is set to RUN.
- The low oil pressure indicator is ON.
- The PGM-FI malfunction indicator lamp is OFF.

Starting & Stopping the Engine


The low oil pressure indicator should go off a few seconds after the engine starts. If the indicator stays on, stop the engine immediately and check the engine oil level.

Starting Procedure

To restart a warm engine, follow the procedure for *High Air Temperature*.

Normal Air Temperature
10°–35°C (50°–95°F)

LEFT SIDE

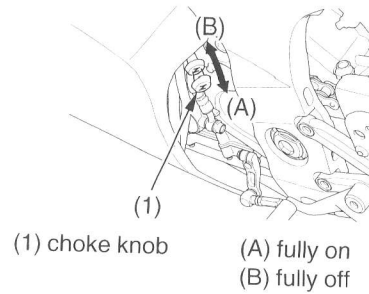

Starting & Stopping the Engine

1. Pull the choke knob back all the way to fully ON (A), if the engine is cold.
2. Start the engine, leaving the throttle closed.
3. Immediately after the engine starts, operate the choke knob to keep fast idle at:
1,500—2,500 rpm
4. About a quarter minute after the engine starts, push the choke knob (1) forward all the way to fully OFF (B).
5. If idling is unstable, open the throttle slightly.

The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

High Air Temperature 35°C (95°F) or above

1. Do not use the choke.
2. Start the engine.

The radiator cooling fan may start to rotate when the choke knob is pulled out with the engine heated, but this is normal. As this takes place, check that the choke knob is returned completely.

Low Air Temperature 10°C (50°F) or below

1. Follow steps 1-2 under *Normal Air Temperature*.
2. When engine rpm begins to pick up, operate the choke knob to keep fast idle at:
1,500—2,500 rpm

(cont'd)

Starting & Stopping the Engine

3. Continue warming up the engine until it runs smoothly and responds to the throttle when the choke knob is at fully OFF (B).

NOTICE

Extended use of the choke may impair piston and cylinder wall lubrication and damage the engine.

Snapping the throttle or fast idling for more than about 5 minutes at normal air temperature may cause exhaust pipe discoloration.

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine:

1. Leave the engine stop switch set to RUN.
2. Push the choke knob forward all the way to fully OFF.
3. Open the throttle fully.
4. Press the start button for 5 seconds.
5. Follow the normal starting procedure.
6. If the engine starts, then open the throttle slightly if idling is unstable. If the engine does not start, wait 10 seconds, then follow steps 1 — 5 again.

If the engine still won't start, refer to *If Your Engine Quits or Won't Start*, page 165.

Bank Angle Sensor Ignition Cut-off System

Your motorcycle's banking (lean angle) sensor system is designed to automatically stop the engine and fuel pump if the motorcycle is overturned.

Before restarting the engine, you must turn the ignition switch to the OFF position and then back to ON. The engine will not restart until you perform this procedure.

Starting & Stopping the Engine

How to Stop the Engine

Normal Engine Stop


To stop the engine, shift into neutral and turn the ignition switch OFF.

The engine stop switch should normally remain in the RUN position even when the engine is OFF.

If your motorcycle is stopped with the engine stop switch OFF and the ignition switch ON, the headlight and taillight will remain on, resulting in battery discharge.

Emergency Engine Stop

To stop the engine in an emergency, use the engine stop switch. To operate, press the switch to the OFF position.

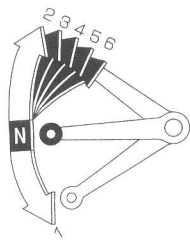

shifting pattern

Your motorcycle has six forward gears in a one-down, five-up shift pattern which is coordinated with a hydraulically actuated clutch system.

Learning when to shift gears comes with experience. Keep the following tips in mind:

- As a general rule, shift while moving in a straight line.

- Close the throttle and pull the clutch lever in completely before shifting. Improper shifting may damage the engine, transmission, and drive train.
- Learn to recognize the engagement point as you release the clutch lever. It is at this point the transmission of power to the rear wheel resumes.
- Upshift to a higher gear or reduce throttle before engine rpm (speed) gets too high. Learn the relationship between engine sound and the normal shifting points.
- Downshift to a lower gear before you feel the engine laboring (lugging) at low rpm.

Shifting Gears

- Avoid downshifting to help slow your motorcycle when engine rpm is near its allowable maximum (near the tachometer red zone). In this situation, the rev limiter in the engine ignition control module may not prevent excessive engine speed which could damage the engine.
- To prevent transmission damage, do not coast or tow the motorcycle for long distances with the engine off.

Recommended Shift Points

Ride in the highest gear that lets the engine run and accelerate smoothly. This will give you good fuel economy and effective emissions control. When changing gears under normal conditions, use these recommended shift points:

Shifting Up:

From 1st to 2nd:	12 mph (20 km/h)
From 2nd to 3rd:	19 mph (30 km/h)
From 3rd to 4th:	25 mph (40 km/h)
From 4th to 5th:	31 mph (50 km/h)
From 5th to 6th:	37 mph (60 km/h)

Shifting Down:

From 6th to 5th:	28 mph (45 km/h)
From 5th to 4th:	22 mph (35 km/h)
From 4th to 3rd:	16 mph (25 km/h)

Pull the clutch lever in when speed drops below 9 mph (15 km/h), when engine roughness is evident, or when engine stalling is imminent; and shift down to 1st gear for acceleration.

Your motorcycle is equipped with disc braking systems which are hydraulically activated. Depressing the brake pedal applies the rear disc brake. Operating the brake lever applies the two front disc brakes.

As a general rule, the front braking system provides about 70 percent of total stopping power.

For full braking effectiveness, use both the pedal and lever simultaneously. Using both braking systems will stop your motorcycle faster with greater stability.

To slow or stop, apply the brake lever and brake pedal smoothly, while downshifting to match your speed.

Gradually increase braking as you feel the brakes slowing your speed. The increase in engine compression from downshifting will help slow your motorcycle.

To prevent stalling the engine, pull the clutch lever in before coming to a complete stop. For support, put your left foot down first, then your right foot when you are through using the brake pedal.

Applying the brakes too hard may cause the wheels to lock and slide, reducing control of your motorcycle. If this happens, release the brake controls, steer straight ahead until you regain control, then reapply the brakes more gently.

Braking

When possible, reduce your speed or complete braking before entering a turn. Avoid braking or closing the throttle quickly while turning. Either action may cause one or both wheels to slip and reduce your control of your motorcycle.

Your ability to brake in a turn and to brake hard in an emergency situation are important riding skills. We suggest attending a Motorcycle Safety Foundation experienced rider training course (page 32) to retain these skills.


When descending a long, steep grade, use engine compression braking by downshifting, with intermittent use of both brakes. Continuous brake application can overheat the brakes and reduce their effectiveness.

Riding with your foot resting on the brake pedal or your hand on the brake lever may actuate the brakelight, giving a false indication to other drivers. It may also overheat the brakes, reducing effectiveness.

1. Look for a level parking area. If you can't park on a paved surface, make sure the ground surface is firm, especially under the side stand. If you must park on a hill, leave the transmission in gear and position the rear tire against the curb at a 45 degree angle.
2. Use the side stand to support the motorcycle while parked.
 - To lower the side stand, use your foot to guide it down. Remember that lowering the side stand with the transmission in gear will stop the engine, even if the clutch lever is pulled in. That is a function of the side stand ignition cut-off system.
 - Check that the side stand is down all the way so that the side stand ignition cut-off system (page 41) is activated.
 - If you have to park on a soft surface, insert something solid under the side stand for support.
3. Use the steering lock, which locks the handlebar in place. Turn the handlebar all the way to the left or right. Push in on the ignition key and turn it to LOCK. Remove the key.
(To unlock the steering lock, insert and push down on the key and turn it to the right to the OFF position.)

Parking


FRONT

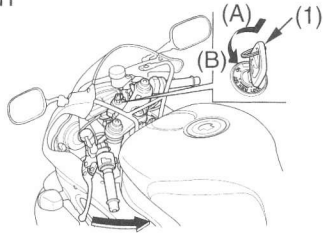

- (1) ignition key (A) push in
(B) turn to LOCK

4. Use the helmet holder to secure your helmet with your motorcycle:
- Remove the rear seat (page 79).
 - Route the helmet wire (2) through the helmet D-ring (3) and hook the loops of the helmet wire onto the rear seat hook (4).
 - Install the rear seat.

LEFT REAR

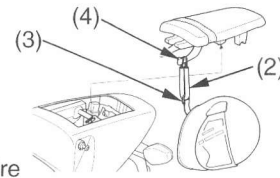

- (2) helmet wire
(3) D-ring

- (4) hook

⚠ WARNING

Riding with a helmet attached to the holder can interfere with the rear wheel or suspension and could cause a crash in which you can be seriously hurt or killed.

Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.


Theft-Prevention Tips

- Park your motorcycle in a locked garage whenever possible. If a garage isn't available, park in a concealed area or in a well-lit area with enough pedestrian traffic to discourage a thief.
- Always take the ignition key with you.
- Always use the steering lock (page 51), even if you're parking for just a minute or two. A thief can easily push an unlocked motorcycle to a waiting truck.
- In addition to the steering lock, use a good quality anti-theft device made specifically to lock a motorcycle to a secure object.
- If you decide to use an anti-theft device, select one of good quality and be sure to follow the manufacturer's instructions.
- The rear fender has a storage compartment to store a U-shaped lock under the seat. After storing, use the rubber band (1) to securely fasten the lock. Some U-shaped locks may not be stored in the compartment due to their size or design.

(cont'd)

Parking

UNDER REAR SEAT

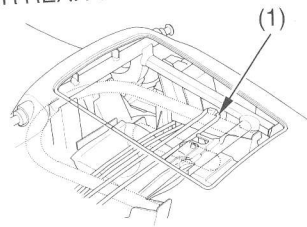

(1) rubber band

- Keep your owner's manual, current registration, and insurance information with your motorcycle. This will make it easier for the authorities to find you if your motorcycle is stolen and recovered.

Your motorcycle is a high-performance sport model designed to carry you and one passenger. Whenever you add a passenger or cargo, you must be careful not to exceed the total load limits for this vehicle (*Load Limits*, page 37). Make sure your cargo is properly secured (*Loading Guidelines*, page 37).

Also consider adjusting the suspension (page 115) for the extra load.

Be aware that carrying a passenger or heavy cargo can affect acceleration, braking, and handling.

Before riding with a passenger, make sure your passenger is wearing the proper protective apparel (page 30). Also check that your passenger is not wearing any loose apparel that might get caught in the drive chain.

Tell your passenger to hold the seat strap or your waist, lean with you in the turns, and keep their feet on the passenger footpegs at all times, even when the motorcycle is stopped at a traffic light.

To help keep your motorcycle in good shape, this section includes a Maintenance Schedule for required service, a list of periodic checks you should perform at least once a month, and step-by-step instructions for specific maintenance tasks. You'll also find important safety precautions, information on fuels and oils, and tips for keeping your Honda looking great.

For information about the exhaust emission and noise emission requirements of the U.S. Environmental Protection Agency (EPA) and the California Air Resources Board (CARB), see page 208.

For information about replacing fuses, see page 186.

USA only

Maintenance, replacement or repair of the emission control devices and systems may be performed by any motorcycle repair establishment or individual using parts that are "certified" to EPA standards.

Before You Service Your Honda

The Importance of Maintenance	60
Maintenance Safety	61
Important Safety Precautions	62
Periodic Maintenance	64
Maintenance Schedule	66
Maintenance Record	71

(cont'd)

Servicing Your Honda

Service Preparations

Component Locations	73
Tool Kit.....	76
Owner’s Manual Storage.....	77
Seat Removal.....	78
Rear Cowl Removal	81
Lower Fairing Removal	82
Inner Fairing Removal	84
Raising the Fuel Tank	85

Service Procedures

Fluids & Filters

Fuel	86
Engine Oil & Filter	89
Coolant.....	99
Crankcase Breather	103

Engine

Throttle	104
Clutch System.....	106
Engine Idle Speed.....	109
Spark Plugs	111

Chassis

Suspension	115
Brakes	124
Tires	130
Side Stand	137
Drive Chain.....	138

Electrical

Battery	145
---------------	-----

Appearance Care	150
-----------------------	-----

The following table summarizes the three types of inspections and servicing recommendations for your motorcycle. Both the pre-ride inspection and the scheduled maintenance at the recommended intervals are necessary to assure safe and dependable performance. The periodic checks provide additional confidence in your motorcycle's performance.

Type of Inspection/Service	Refer to page:	When Performed	Who Performs
Pre-ride Inspection	33	before every ride	you
Periodic Maintenance	64	monthly*	you
Maintenance Schedule	66	interval on schedule	your Honda dealer**

* more often if you ride frequently or long distances; or anytime you clean your motorcycle

** unless you have the proper tools and service data and are mechanically qualified

The Importance of Maintenance

Keeping your motorcycle well-maintained is absolutely essential to your safety. It's also a good way to protect your investment, get maximum performance, avoid breakdowns, and have more fun. A properly maintained motorcycle will also help to reduce air pollution.

Remember, proper maintenance is the owner's responsibility. Be sure to inspect your motorcycle before each ride, perform the periodic checks, and follow the Maintenance Schedule in this section.

WARNING

Improperly maintaining this motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

If your motorcycle overturns or is involved in a crash, be sure your Honda dealer inspects all major parts, even if you are able to make some repairs.

This section includes instructions on how to perform some important maintenance tasks. If you have basic mechanical skills, you can perform many of these tasks with the tools provided with your motorcycle.

Other tasks that are more difficult and require special tools are best performed by professionals. Wheel removal should normally be handled only by a Honda technician or other qualified mechanic. Instructions are included in this manual only to assist in emergency service.

Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

Important Safety Precautions

- Make sure the engine is off before you begin any maintenance or repairs. This will help eliminate several potential hazards:

Carbon monoxide poisoning from engine exhaust. Be sure there is adequate ventilation whenever you operate the engine.

Burns from hot motorcycle parts. Let the engine and exhaust system cool before touching.

Injury from moving parts. Do not run the engine unless instructed to do so.

- Read the instructions before you begin, and make sure you have the tools and skills required.
- To help prevent the motorcycle from falling over, park it on a firm, level surface, using the side stand or a maintenance stand to provide support.
- To reduce the possibility of a fire or explosion, be careful when working around gasoline. Use only non-flammable solvent, not gasoline, to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related parts.

Remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it. To ensure the best quality and reliability, use only new genuine Honda parts or their equivalents for repair and replacement. If you have the tools and skills required for additional maintenance jobs, you can purchase an official Honda Service Manual (page 214).

Periodic Maintenance

In addition to the regularly scheduled maintenance (page 66) and daily pre-ride inspection (page 33), consider performing the periodic checks on the following page at least once a month, even if you haven't ridden your motorcycle, or as often as once a week if you ride frequently or for long distances. It's a good idea to perform this maintenance any time you clean your motorcycle.

Check the odometer reading and perform any scheduled maintenance checks that are needed (page 66). Remember, more frequent checks may be needed for riding in severe conditions.

Tires	Check the air pressure with a gauge and add air if needed (page 130). Examine the tread for wear (page 132). Look closely for nails, embedded objects, cuts, and other types of damage (page 132). Roll your motorcycle so you can inspect the entire surface. Check the condition of the rims.
Fluids	Check the levels of the engine oil (page 93), coolant (page 100), clutch fluid (page 107) and brake fluid (page 126). Add the correct fluid as necessary, and investigate the cause of any low fluid level.
Lights	Make sure the headlight, brake light, taillight, and turn signals are working properly.
Freeplay	Check the freeplay of the throttle grip (page 104).
Drive Chain	Check condition, adjust slack, and lubricate as needed (page 139).
Fuses	Make sure you have a full supply of spare fuses.
Nuts & Bolts	Check the major fasteners and tighten as needed.

Maintenance Schedule

The required Maintenance Schedule that follows specifies how often you should have your motorcycle serviced, and what things need attention. It is essential to have your motorcycle serviced as scheduled to maintain safe, dependable performance and proper emission control.

The service intervals in this Maintenance Schedule are based on average riding conditions. Some items will need more frequent service if you ride in unusually wet or dusty areas or at full throttle. Consult your Honda dealer for recommendations applicable to your individual needs and use.

Some items in the Maintenance Schedule can be performed with basic mechanical skills and hand tools. Procedures for these items are provided in this manual. Other items involve more extensive procedures and may require special training, tools, and equipment. We recommend that you have your Honda dealer perform these tasks unless you have advanced mechanical skills and the required tools and equipment. Procedures for such items in this schedule are provided in an official Honda Service Manual available for purchase (page 214).

If you do not feel capable of performing a given task or need assistance, remember that your Honda dealer knows your motorcycle best and is fully equipped to maintain and repair it. If you decide to do your own maintenance, use only genuine Honda parts or their equivalents for repair or replacement to ensure the best quality and reliability.

Perform the pre-ride inspection (page 33) and owner maintenance (page 68) at each scheduled maintenance period.

Each item on the maintenance schedule requires some mechanical knowledge. Certain items (particularly those marked * and **) may require more technical information and tools. Consult your Honda dealer.

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 214).

** In the interest of safety, we recommend these items be serviced only by your Honda dealer.

Maintenance Schedule

Summary of Maintenance Schedule Notes & Procedures:

NOTES:

1. At higher odometer readings, repeat at the frequency interval established here.
2. Service more frequently if the motorcycle is ridden in unusually wet or dusty areas.
3. Service more frequently if the motorcycle is ridden often at full throttle or in the rain.
4. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill. Refer to the official Honda service manual.
5. California type only.

Maintenance Procedures:

I: inspect and clean, adjust, lubricate,
or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

Maintenance Schedule

			FREQUENCY	ODOMETER READING (Note 1)									
			× 1,000 mi	0.6	4	8	12	16	20	24	Refer to		
ITEM			NOTE	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	page	
EMISSION RELATED ITEMS	*	FUEL LINE					I		I		I	—	
	*	THROTTLE OPERATION					I		I		I	—	
	*	CHOKE OPERATION					I		I		I	—	
	*	AIR CLEANER	2					I			I	—	
		CRANKCASE BREATHER	3				C	C	C	C	C	103	
		SPARK PLUGS				I EVERY 16,000 mi (25,600 km) R EVERY 32,000 mi (51,200 km)							111
	*	VALVE CLEARANCE							I			—	
		ENGINE OIL			R		R		R		R	89	
		ENGINE OIL FILTER			R		R		R		R	94	
	*	ENGINE IDLE SPEED			I	I	I	I	I	I	I	109	
		RADIATOR COOLANT	4				I		I		R	99	
	*	COOLING SYSTEM					I		I		I	—	
	*	SECONDARY AIR SUPPLY SYSTEM					I		I		I	—	
	*	EVAPORATIVE EMISSION CONTROL SYSTEM	5					I			I	—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 214).

Maintenance Schedule

			FREQUENCY		ODOMETER READING (Note 1)									Refer to
					× 1,000 mi	0.6	4	8	12	16	20	24		
ITEM			NOTE	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4	page		
NON-EMISSION RELATED ITEMS		DRIVE CHAIN			I, L EVERY 500 mi (800 km)								138	
		BRAKE FLUID	4			I	I	R	I	I	R	125		
		BRAKE PAD WEAR				I	I	I	I	I	I	128		
		BRAKE SYSTEM			I		I		I		I	124		
	*	BRAKE LIGHT SWITCH					I		I		I	—		
	*	HEADLIGHT AIM					I		I		I	—		
		CLUTCH SYSTEM					I		I		I	106		
		CLUTCH FLUID	4			I	I	R	I	I	R	107		
		SIDE STAND					I		I		I	137		
	*	SUSPENSION					I		I		I	—		
	*	NUTS, BOLTS, FASTENERS			I		I		I		I	—		
	**	WHEELS/TIRES					I		I		I	—		
	**	STEERING HEAD BEARINGS			I		I		I		I	—		

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 214).

**In the interest of safety, we recommend these items be serviced only by your Honda dealer.

Maintenance Record


Keeping an accurate maintenance record will help ensure that your motorcycle is properly maintained. Retain detailed receipts to verify the maintenance was performed. If the motorcycle is sold, these receipts should be transferred with the motorcycle to the new owner. Make sure whoever performs the maintenance completes this record. All scheduled maintenance, including the 600 mile (1,000 km) initial maintenance, is considered a normal owner operating cost and will be charged for by your dealer. Use the space under Notes to record anything you want to remind yourself about or mention to your dealer.

Miles (km)	Odometer	Date	Performed By:	Notes
600 (1,000)				
4,000 (6,400)				
8,000 (12,800)				
12,000 (19,200)				
16,000 (25,600)				
20,000 (32,000)				


Maintenance Record

Miles (km)	Odometer	Date	Performed By:	Notes
24,000 (38,400)				
28,000 (44,800)				
32,000 (51,200)				
36,000 (57,600)				
40,000 (64,000)				
44,000 (70,400)				
48,000 (76,800)				
52,000 (83,200)				
56,000 (89,600)				
60,000 (96,000)				
64,000 (102,400)				
68,000 (108,800)				


Component Locations

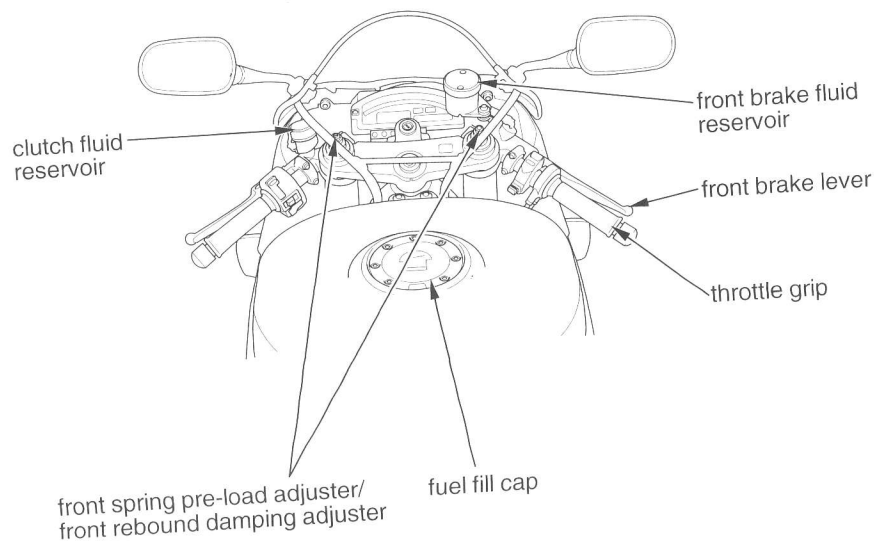

Component Locations

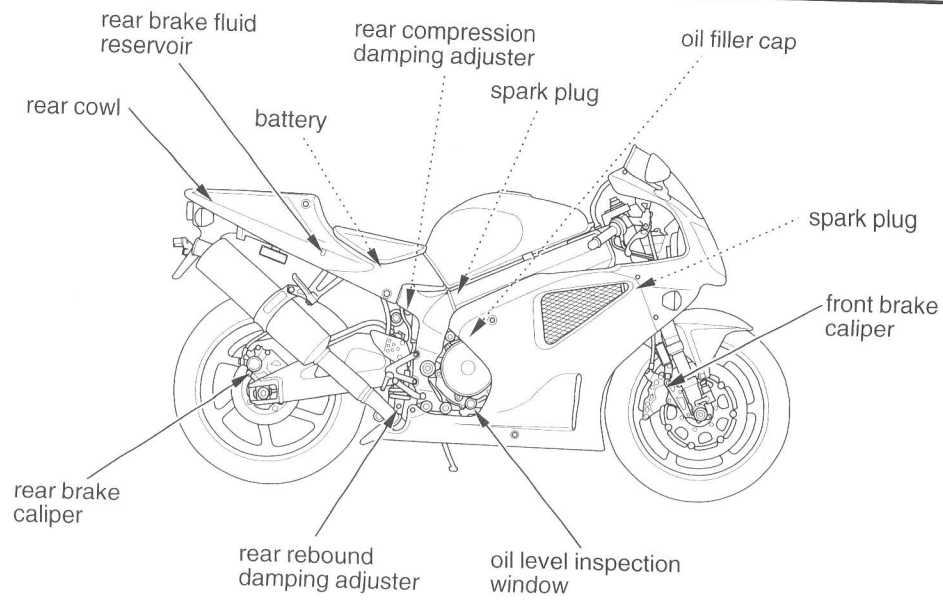


Component Locations

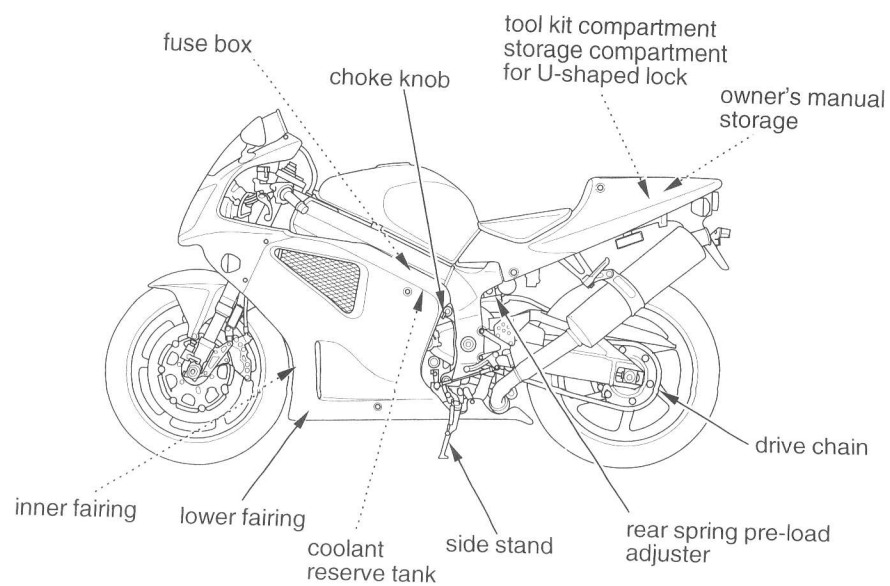

Tool Kit

The tool kit (1) is stored in the storage compartment under the rear seat (page 79). Some roadside repairs, minor adjustments, and parts replacement can be performed with the tools contained in the kit.

UNDER REAR SEAT

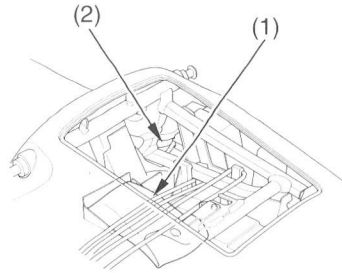


(1) tool kit (2) storage compartment

- 10 × 12 mm open end wrench
- 8 mm box wrench
- 10 × 12 mm box end wrench
- 32 mm box end wrench
- 22 mm box end wrench
- spark plug wrench
- 5 mm hex wrench
- 8 mm open end wrench
- no. 2 Phillips screwdriver
- no. 2 screwdriver
- screwdriver handle
- pin spanner
- extension bar
- pliers
- 0.7 mm feeler gauge
- helmet cable
- tool bag

Your motorcycle provides storage for the owner's manual so you'll have it with you for easy reference. Store your owner's manual (and other documents) in the plastic storage bag (1) in the storage compartment (2) under the rear seat.

Be careful not to flood this area when washing your motorcycle.

UNDER REAR SEAT

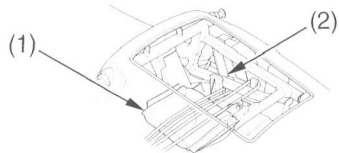


- (1) owner's manual storage bag
- (2) owner's manual storage compartment

Seat Removal

Refer to *Safety Precautions* on page 62 .

The front seat must be removed for battery and fuse maintenance, or to lift the fuel tank.

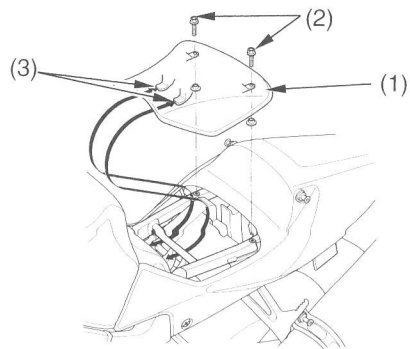

(1) front seat
(3) prongs

(2) mounting bolts

Removal


1. Pull up the front seat (1) end and remove the seat mounting bolts (2).
2. Pull the seat (1) back and up.

Installation

1. Insert the prongs (3) into the recess under the frame.
2. Tighten the seat mounting bolts securely.

Refer to *Safety Precautions* on page 62 .

Seat Cowl Panel

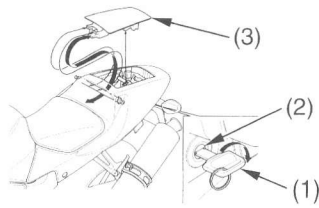

- (1) ignition key (2) seat lock
(3) seat cowl panel

Removal

1. Insert the ignition key (1) into the seat lock (2).
2. Turn it clockwise and pull up rear of the seat cowl panel (3).

3. Pull the seat cowl panel (3) back and up.


Installation

1. Push forward and then down on the rear of the seat cowl panel.

Be sure to securely lock the seat after reinstalling it.

Rear Seat


Remove the seat cowl panel when using the rear seat (4).

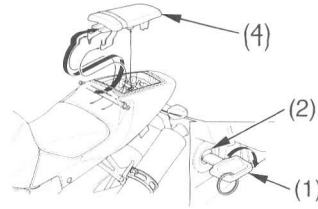

- (4) rear seat

Seat Removal

To prevent scratches to the rear cowl, attach the seat cowl rubber (5) provided before installing the rear seat.

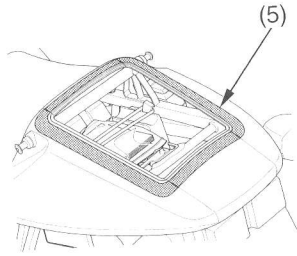

(5) seat cowl rubber

Rear Cowl Removal

Refer to *Safety Precautions* on page 62 .


The rear cowl must be removed for main fuse maintenance.

Removal

1. Remove the front seat (page 78).
2. Remove the seat cowl panel (page 79).
3. Remove the clips (1).
4. Remove the bolts A (2) and bolts B(3).
5. Slightly spread the front of the rear cowl (4) and remove it.

Installation

- Installation can be done in the reverse order of removal.

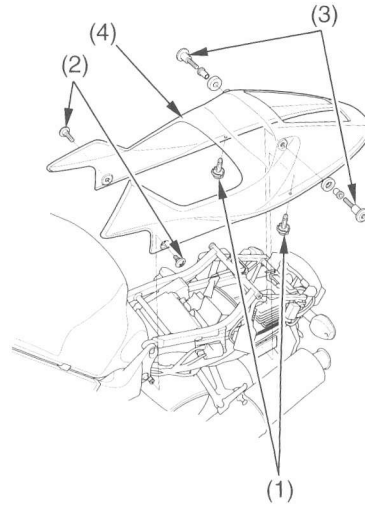

(1) clips
(2) bolts A


(3) bolts B
(4) rear cowl

Lower Fairing Removal

Refer to *Safety Precautions* on page 62 .

The lower fairing must be removed to service the coolant reserve tank or to remove the inner fairing.

RIGHT SIDE

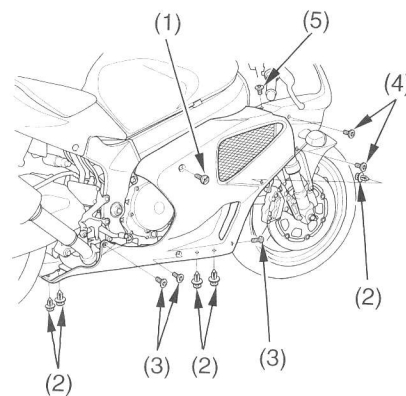


- (1) A bolts
- (2) clips
- (3) B bolts

- (4) C bolts
- (5) D bolts

Lower Fairing Removal

LEFT SIDE

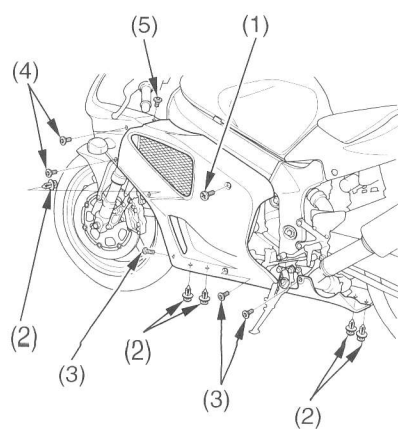

(1) A bolts
(2) clip
(3) B bolts

(4) C bolts
(5) D bolts

Removal

1. Turn the A bolts (1) 90° counterclockwise.
2. Remove the clips (2).
3. Remove the B bolts (3), C bolts (4) and D bolts (5).

Installation

- Installation can be done in the reverse order of removal.

Inner Fairing Removal

Refer to *Safety Precautions* on page 62 .


The inner fairing must be removed to service the engine oil filter.

Removal

1. Remove the lower fairing (page 82).
2. Remove the bolts (1).
3. Remove the clips (2).

Installation

- Installation can be done in the reverse order of removal.

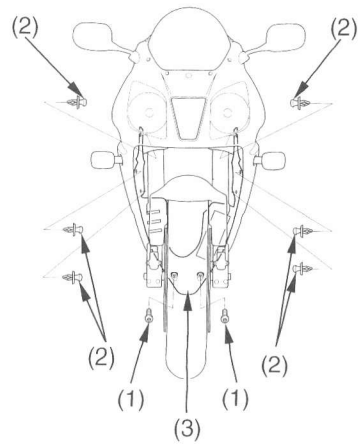

(1) bolts
(2) clips

(3) inner fairing


Refer to *Safety Precautions* on page 62 .

The fuel tank must be raised to service the rear cylinder spark plug.

The fuel tank does not require draining for this procedure.

1. Check that the fuel fill cap is closed.
2. Remove the front seat (page 78).
3. Remove the bolts (1) and washers.

RIGHT SIDE

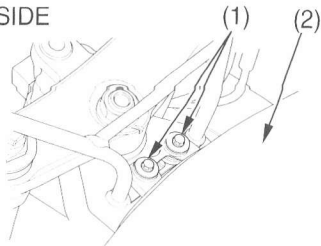


(1) bolts

(2) fuel tank

4. Raise the front of the fuel tank (2) and temporarily install one of the removed bolts in the frame body as shown.
5. Insert the pin spanner (3) from the tool kit into the extension bar (4).

LEFT SIDE

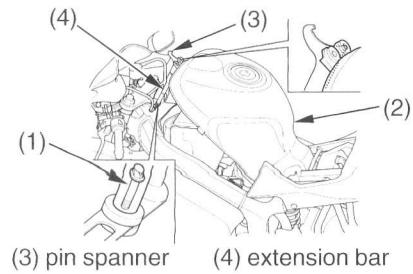

(3) pin spanner

(4) extension bar

6. Place the base of the extension bar over the installed bolt and position the pin spanner so that it supports the fuel tank.

Fuel

Refer to *Safety Precautions* on page 62 .

Fuel Recommendation

type	unleaded
pump octane number	92 (or higher)

We recommend that you use unleaded fuel because it produces fewer engine deposits and extends the life of exhaust system components.

Your engine is designed to use any gasoline that has a pump octane number of 92 or higher. Gasoline pumps at service stations normally display the pump octane number. For information on the use of oxygenated fuels, see page 211.

Use of lower octane gasoline can cause persistent “pinging” or “spark knock” (a loud rapping noise) which, if severe, can lead to engine damage. Light pinging experienced while operating under a heavy load, such as climbing a hill, is no cause for concern.

If pinging or spark knock occurs at a steady engine speed under normal load, change brands of gasoline. If pinging or spark knock persists, consult your Honda dealer.

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.


Fuel Capacity

Fuel tank capacity:
4.76 US gal (18.0 l)

The tank should be refilled as soon as possible when the fuel reserve indicator comes on.

Refueling Procedure

Refer to *Safety Precautions* on page 62 .

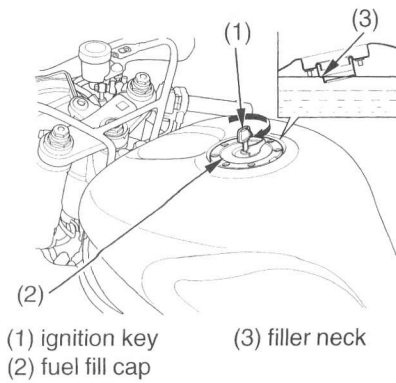

- (1) ignition key (3) filler neck
(2) fuel fill cap

1. Insert the ignition key (1) in the fuel fill cap (2) and turn it clockwise.

Fuel

2. Open the cap.
3. Add fuel until the level reaches the bottom of the filler neck (3). Avoid overfilling the tank. There should be no fuel in the filler neck.

WARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

4. After refueling, push the fuel fill cap closed until it snaps and locks.
5. Remove the ignition key from the cap.

Engine oil quality is a major factor that affects both the performance and the service life of the engine.

Using the proper oil (page 90) and filter, and regularly checking, adding, and changing oil will help extend your engine's life. Even the best oil wears out. Changing oil helps get rid of dirt and deposits in the engine. Operating the engine with old or dirty oil can damage your engine. Running the engine with insufficient oil can cause serious damage to the engine and transmission.

Change the engine oil as specified in the maintenance schedule on page 69 .

When running in very dusty conditions, oil changes should be performed more frequently than specified in the maintenance schedule.

Oil Recommendation

API classification	SG or higher except oils labeled as energy conserving on the circular API service label
viscosity (weight)	SAE 10W-40
JASO T 903 standard	MA

suggested oil*

Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil (USA & Canada), or Honda 4-stroke oil (Canada only), or an equivalent motorcycle oil.

* Suggested oils are equal in performance to SJ oils that are not labeled as energy conserving on the circular API service label.

- Your motorcycle does not need oil additives. Use the recommended oil.
- Do not use oils with graphite or molybdenum additives. They may adversely affect clutch operation.
- Do not use API SH or higher oils displaying a circular API “energy conserving” service label on the container. They may affect lubrication and clutch performance.




NOT RECOMMENDED



OK

- Do not use non-detergent, vegetable, or castor based racing oils.

Other viscosities shown in the following chart may be used when the average temperature in your riding area is within the indicated range.

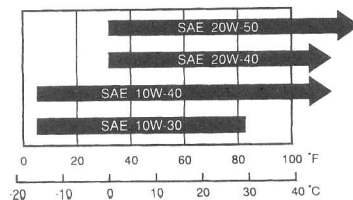


Engine Oil & Filter

JASO T 903 standard

The JASO T 903 standard is an index to choose engine oils for 4-stroke motorcycle engines.

There are two classes: MA and MB.

Oil conforming to the standard has the following classification on the oil container.

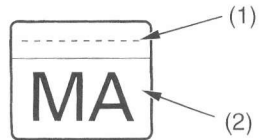

PRODUCT MEETING JASO T 903
COMPANY GUARANTEEING THIS MA PERFORMANCE:


(1) code number of the sales company
of the oil

(2) oil classification

Checking & Adding Oil

Refer to *Safety Precautions* on page 62 .

RIGHT SIDE

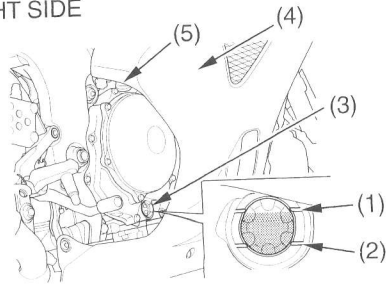

- (1) upper level mark
- (2) lower level mark
- (3) oil inspection window
- (4) lower fairing
- (5) oil filler cap

1. Park your motorcycle on its side stand on a firm, level surface.
2. Start the engine and let it idle for 3–5 minutes. Make sure the low oil pressure indicator goes off. If the indicator remains on, stop the engine immediately.
3. Stop the engine and wait 2–3 minutes.
4. Hold the motorcycle in an upright position.

5. Check that the oil level is between the upper (1) and lower (2) level marks in the inspection window (3).
 - If the oil is at or near the upper level mark (1) — you do not have to add oil.
 - If the oil is below or near the lower level mark (2) — remove the lower fairing (4), the oil filler cap (5) and add the recommended oil until it reaches the upper level mark. (Do not overfill.)
Reinstall the oil filler cap.
6. Check for oil leaks.

Changing Engine Oil & Filter

Refer to *Safety Precautions* on page 62 .

Your motorcycle's oil filter has very specific performance requirements. Use a new genuine Honda oil filter or a filter of equal quality specified for your model.

NOTICE

Using the wrong oil filter may result in leaks or premature engine damage.


This procedure requires mechanical skill and professional tools such as a torque wrench and oil filter wrench, as well as a means for disposing of the drained fluid (page 162). If you do not have the skills or the tools, see your Honda dealer.

Drain the Engine Oil:

1. Park the motorcycle on its side stand on a firm, level surface.
2. If the engine is cold, start it and let it idle for 3—5 minutes. Turn the engine off. Wait 2—3 minutes for the oil to settle.
3. Remove the lower fairing and the inner fairing (page 82).

4. Place a drain pan under the crankcase drain bolt (1).
5. To drain the oil, remove the oil filler cap, crankcase drain bolt, and sealing washer (2).

LEFT SIDE

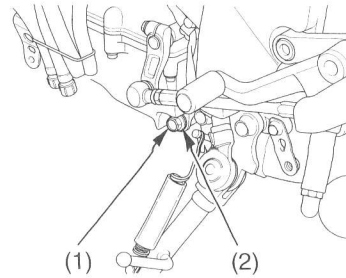

(1) crankcase
drain bolt


(2) sealing washer

Engine Oil & Filter

Install a New Oil Filter:

6. Remove the oil filter (3) with a filter wrench and let the remaining oil drain out. Discard the oil filter in an approved manner (page 162).

RIGHT SIDE, UNDER ENGINE

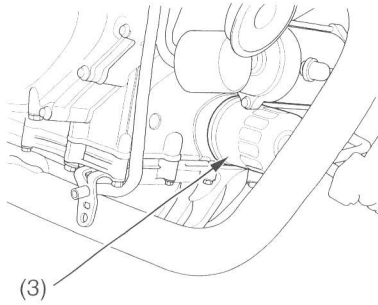


(3) oil filter

7. Pour the drained oil into a suitable container and dispose of it in an approved manner (page 162).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

8. Apply a thin coat of engine oil to the rubber seal (4) of a new oil filter.

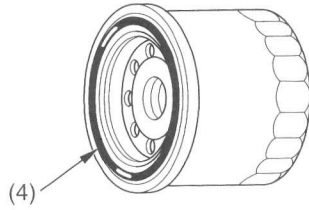

(4) oil filter rubber seal

9. Install the new oil filter and tighten it by hand.
10. Using an oil filter wrench attachment and a torque wrench, tighten the new oil filter to the specified torque:
20 lbf·ft (26 N·m , 2.7 kgf·m)

11. Check the condition of the sealing washer on the drain bolt. Replace the washer every other time the oil is changed.
- Install the drain bolt and tighten it to the specified torque:
22 lbf·ft (29 N·m , 3.0 kgf·m)

Add Engine Oil:

12. Fill the crankcase with the recommended oil (page 90), approximately:
4.1 US qt (3.9 ℓ)
13. Install the oil filler cap.

Engine Oil & Filter

14. Start the engine and let it idle for 3–5 minutes.
15. Stop the engine and wait 2–3 minutes.
16. Hold the motorcycle upright and check that the oil level is at the upper level mark in the inspection window (page 93).
17. Check that there are no oil leaks.

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

Your motorcycle's liquid cooling system dissipates engine heat through the coolant jacket that surrounds the cylinder and cylinder head.

Maintaining the coolant will allow the cooling system to work properly and prevent freezing, overheating, and corrosion.

Coolant Recommendation

Use Pro Honda HP coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines. Check the antifreeze container label.

Use only distilled water as a part of the

coolant solution. Water that is high in mineral content or salt may be harmful to the aluminum engine.

NOTICE

Using coolant with silicate inhibitors may cause premature wear of water pump seals or blockage of radiator passages.

Using tap water may cause engine damage.

The factory provides a 50/50 solution of antifreeze and water in this motorcycle. This coolant solution is recommended for most operating temperatures and provides good corrosion protection.

Decreasing the concentration of antifreeze to less than 40% will not provide proper corrosion protection.


Coolant

Increasing the concentration of antifreeze is not recommended because it decreases cooling system performance. Higher concentrations of antifreeze (up to 60%) should only be used to provide additional protection against freezing. Check the cooling system frequently during freezing weather.

Checking & Adding Coolant

Refer to *Safety Precautions* on page 62 .

LEFT SIDE

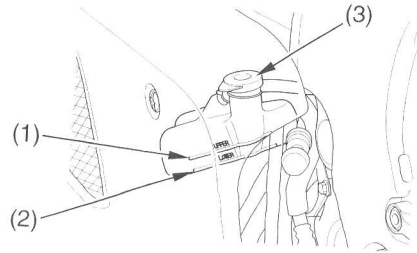

- (1) UPPER level mark
- (2) LOWER level mark
- (3) reserve tank cap

1. With the engine at normal operating temperature, check the coolant level in the reserve tank. It should be between the UPPER (1) and LOWER (2) level marks.
If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your Honda dealer for repair.
2. Remove the lower fairing (page 82).
3. Remove the reserve tank cap (3).
Always add coolant to the reserve tank.
Do not attempt to add coolant by removing the radiator cap.
4. Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.

Coolant Replacement

Refer to *Safety Precautions* on page 62 .

Coolant should be replaced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 214).

(cont'd)

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

To properly dispose of drained coolant, refer to *You & the Environment*, page 162 .

NOTICE


Improper disposal of drained fluids is harmful to the environment.

Refer to *Safety Precautions* on page 62 .

Service the crankcase breather more frequently if your motorcycle is ridden in the rain or often at full throttle. Service the breather if you can see deposits in the transparent section of the drain tube.

Draining

LEFT SIDE

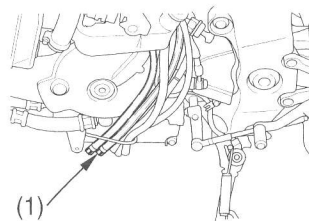


(1) crankcase breather tube plug

1. Place a drain pan under the crankcase breather tube plug (1).
2. Remove the plug to drain the deposits in the tube.
3. Reinstall the crankcase breather tube plug.

Throttle Freeplay

Refer to *Safety Precautions* on page 62 .

RIGHT HANDLEBAR

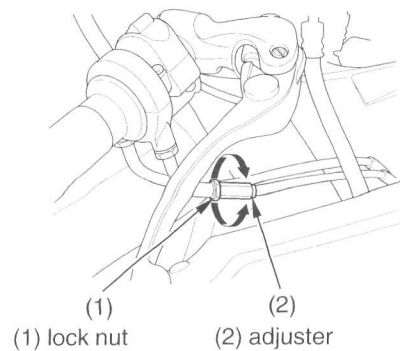

Inspection

Check freeplay at the throttle grip flange.

Freeplay:

1/16 – 1/4 in (2 – 6 mm)

If necessary, adjust to the specified range.

Adjustment

1. Loosen the lock nut (1).
2. Turn the adjuster (2).
3. After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.

Throttle Inspection

Refer to *Safety Precautions* on page 62 .

1. Check that the throttle assembly is positioned properly and the securing bolts are tight.
2. Check for smooth rotation of the throttle from fully open to fully closed in all steering positions. If there is a problem, see your Honda dealer.

Clutch System

Your motorcycle has a hydraulically-actuated clutch. There are no adjustments to perform, but the clutch system must be inspected periodically for fluid level and leakage.


If control lever freeplay becomes excessive and the motorcycle creeps or stalls when shifted into gear, or if the clutch slips, causing acceleration to lag behind engine speed, there is probably air in the clutch system. See your Honda dealer to have the air bled out of the system.

Clutch Lever Adjustment

Refer to *Safety Precautions* on page 62 .

The distance between the tip of the clutch lever and the grip may be adjusted.

LEFT HANDLEBAR

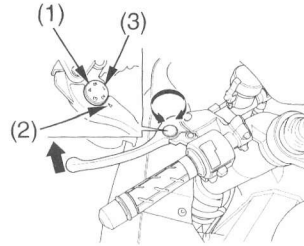

(1) adjuster dial
(2) index mark


(3) numbers

1. Turn the adjuster dial (1) while pushing the clutch lever forward.
2. Align the index mark (2) on the clutch lever with the numbers (3) on the adjuster dial.
3. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your motorcycle should move smoothly and accelerate gradually.

Fluid Level Inspection

Refer to *Safety Precautions* on page 62 .

LEFT FRONT

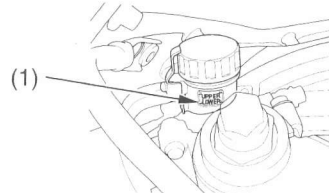

(1) LOWER level mark

Check that the fluid level is above the LOWER level mark. If the fluid level is below the LOWER level mark, it indicates fluid leakage. See your Honda dealer for repair.

Clutch System

Other Inspections

- Make sure there are no fluid leaks.
- Check for deterioration or cracks in the hose and fittings.
- Check that the clutch lever assembly is positioned properly and the securing bolts are tight.


Remember, idle speed adjustment is not a “cure-all” for other problems in your engine’s fuel-delivery system. Adjusting the idle will not compensate for a fault elsewhere.

The engine must be at normal operating temperature for accurate idle speed adjustment.

Idle Speed Adjustment

Refer to *Safety Precautions* on page 62 .

RIGHT SIDE

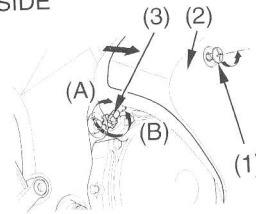

- | | |
|-------------------------|--------------|
| (1) bolt | (A) increase |
| (2) right lower fairing | (B) decrease |
| (3) throttle stop screw | |

1. If the engine is cold, start it and warm it up with ten minutes of stop-and-go riding. Stop the engine.

Engine Idle Speed

2. Place your motorcycle on its side stand on a firm, level surface.
3. Turn the bolt (1) 90° counterclockwise and pull the right lower fairing (2) aside.
4. Shift into neutral. Start the engine.
5. Adjust idle speed with the throttle stop screw (3).
Idle speed (in neutral):
 $1,300 \pm 100$ rpm

Spark Plug Recommendation

standard spark plug	IFR9H11 (NGK) or VK27PRZ11 (DENSO)
for cold climate (below 5°C, 41°F)	IFR8H11 (NGK) or VK24PRZ11 (DENSO)

Use only the recommended type of spark plugs in the recommended heat range.

NOTICE

Using spark plugs with an improper heat range can cause engine damage.

This motorcycle uses spark plugs that have an iridium coated center electrode.

Be sure to observe the following when servicing the spark plugs.

- Do not clean the spark plugs. If an electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one.
- Use only a “wire-type feeler gauge” to check the spark plug gap if necessary. To prevent damaging the iridium coating of the center electrode, never use a “leaf-type feeler gauge.”
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.


Spark Plug Replacement & Inspection

Refer to *Safety Precautions* on page 62 .

Spark Plug Access

To access the rear cylinder spark plugs:

LEFT SIDE
(Rear Cylinder)

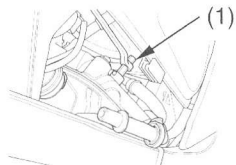


(1) spark plug wrench

1. Remove the front seat (page 78).
2. Raise the fuel tank (page 85).
3. Clean any dirt from around the spark plug bases.

To access the front cylinder spark plugs:

FRONT
(Front Cylinder)

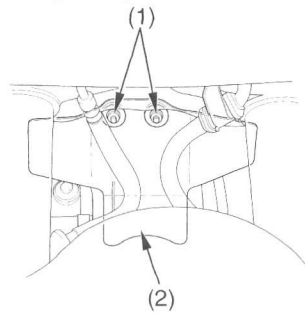

(1) nuts

(2) air guide plate


1. Remove the nuts (1) and the air guide plate (2).

2. Clean any dirt from around the spark plug bases.

Inspection


1. Disconnect the spark plug caps (3).
Take care to avoid damaging the spark plug wire when disconnecting the caps.
2. Using the spark plug wrench (4) provided in the tool kit, remove the spark plugs.

FRONT
(Front Cylinder)

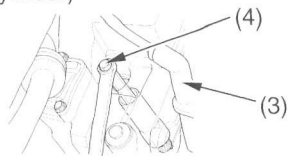

- (3) spark plug cap
(4) spark plug wrench

3. Inspect the electrodes and center porcelain for deposits, corrosion, or carbon fouling. If the corrosion or deposits are heavy, replace the plug.
4. Using a 1.4 mm wire-type feeler gauge, check the spark plug gap (5) of each plug. The gauge should not fit in the gap. If it does fit, replace the plug with a new one.

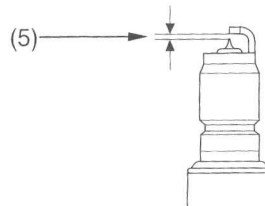

- (5) spark plug gap

(cont'd)

Spark Plugs

5. With the plug washers attached, thread the spark plugs in by hand to prevent cross-threading.
6. Tighten each spark plug:
 - 1/8-1/4 turn after it seats (if the old plug is good)
 - 1/2 turn after it seats (if installing a new plug)

NOTICE

Improperly tightened spark plugs can damage the engine. If a plug is too loose, a piston may be damaged. If a plug is too tight, the threads may be damaged.

7. Reinstall the spark plug caps. Take care to avoid pinching any cables or wires.

Your front and rear suspension systems use springs, hydraulic damping devices, and linkages (rear only) that suspend your weight and most of the weight of your motorcycle.

The spring pre-loads for your front and rear suspension systems adjust the amount of force required to begin compression of the spring.

The oil damper systems hydraulically control the rebound of the suspension springs so that traction and comfort are maintained as the wheels ride over road surfaces.

Consider adjusting your suspension whenever you change your normal load, by adding or subtracting a passenger, cargo, or accessories, or when the road or riding conditions change.

The way you ride your motorcycle and the type of ride you want to experience can also influence your suspension needs.

You may adjust the spring pre-load of both suspension systems. You may also adjust the rebound damping of the rear suspension system.

Suspension

Lower spring pre-load and softer damping provide a softer ride and are usually preferred for light loads and smooth roads. Higher spring pre-load and firmer damping provide a firmer ride and are recommended for heavy loads, rough road conditions, and faster, more challenging riding.


Front Suspension Adjustment

The front suspension can be adjusted for rider (and passenger) weight and riding conditions by changing the spring pre-load and rebound damping.

Front Suspension Spring Pre-load

Refer to *Safety Precautions* on page 62 .

FRONT

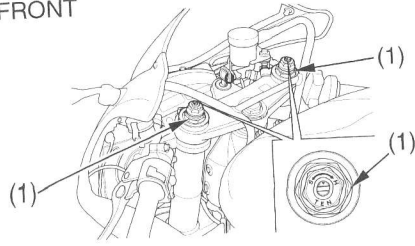

(1) pre-load adjuster

Adjust the spring pre-load by turning the pre-load adjuster (1) with the 22 mm wrench provided in the tool kit.

To adjust to the standard position:

1. Turn the pre-load adjuster (1) counterclockwise until it will no longer turn (*lightly seats*). This is the full soft setting.
2. Turn the adjuster clockwise 6 turns. This is the standard position.
3. Make sure that both fork legs are adjusted to the same position.

To Reduce Spring Pre-load (SOFT):

For a light load and smooth road conditions, turn the adjuster counterclockwise toward **SOFT**.

To Increase Spring Pre-load (HARD):


For a firmer ride and rough road conditions, turn the adjuster clockwise toward **HARD**.

Front Suspension Damping

Refer to *Safety Precautions* on page 62 .

Rebound Damping

FRONT

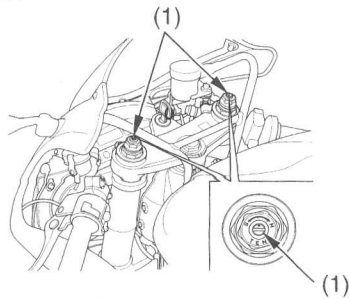

(1) damping adjuster

To adjust to the standard position:

1. Turn the rebound damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the adjuster counterclockwise 1 turns. This is the standard position.
3. Make sure that both fork legs are adjusted to the same position.

To Reduce Rebound Damping (SOFT):


For a light load and smooth road conditions, turn the adjuster counterclockwise toward SOFT (S).

To Increase Rebound Damping (HARD):

For a firmer ride and rough road conditions, turn the adjuster clockwise toward HARD (H).

Compression Damping

LEFT SIDE

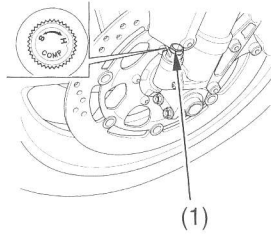

(1) damping adjuster

To adjust to the standard position:

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.

2. Turn the adjuster counterclockwise for 12 clicks. This is the standard position.

To Reduce Compression Damping (SOFT):

For a light load and smooth road conditions, turn the adjuster counterclockwise toward SOFT.

To Increase Compression Damping (HARD):

For a firmer ride and rough road conditions, turn the adjuster clockwise toward HARD.

Suspension

Rear Suspension Adjustment


The rear suspension can be adjusted for rider (and passenger) weight and riding conditions by changing the spring pre-load and rebound damping.

The rear shock absorber includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble, service, or dispose of the damper; see your Honda dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

Rear Suspension Spring Pre-load

Refer to *Safety Precautions* on page 62 .

RIGHT SIDE

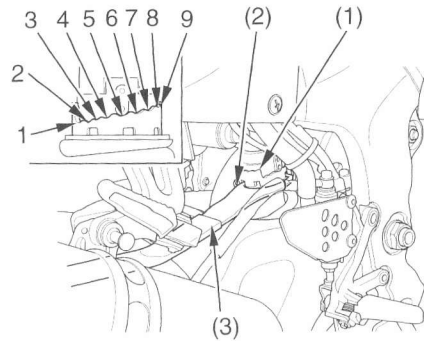

(1) spring adjuster (3) extension bar
(2) pin spanner

The spring pre-load adjuster (1) has 9 positions for different load or riding conditions.

Use the pin spanner (2) and extension bar (3) to adjust the rear shock spring pre-load.

Positions 1 to 4: for a light load and smooth road conditions.

Position 5: standard position.

Positions 6 to 9: for when the motorcycle is more heavily loaded. (Also increase spring pre-load for stiffer rear suspension.)


Always adjust the shock absorber position in sequence (1-2-3-4-5-6-7-8-9 or 9-8-7-6-5-4-3-2-1). Attempting to adjust directly from 1 to 9 or 9 to 1 may damage the shock absorber.

Rear Suspension Damping

Refer to *Safety Precautions* on page 62 .

Rebound Damping

RIGHT SIDE

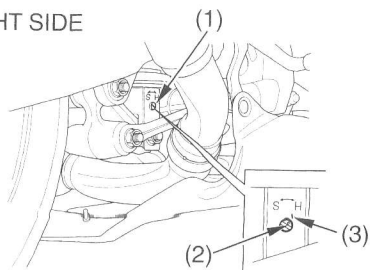

- (1) damping adjuster
- (2) punch mark
- (3) reference punch mark

To adjust to the standard position:

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.
2. Turn the adjuster counterclockwise approximately 1 turn so that the punch mark (2) on the adjuster aligns with the reference punch mark (3). This is the standard position.

To Reduce Rebound Damping (SOFT):


For a light load and smooth road conditions, turn the adjuster counterclockwise toward SOFT (S).

To Increase Rebound Damping (HARD):

For a firmer ride and rough road conditions, turn the adjuster clockwise toward HARD (H).

Compression Damping

RIGHT SIDE

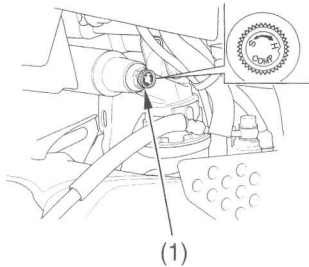

(1) damping adjuster

To adjust to the standard position:

1. Turn the damping adjuster (1) clockwise until it will no longer turn (lightly seats). This is the full hard setting.

2. Turn the adjuster counterclockwise approximately 10 clicks. This is the standard position.

To Reduce Compression Damping (SOFT):

For a light load and smooth road conditions, turn the adjuster counterclockwise toward SOFT.

To Increase Rebound Damping (HARD):

For a firmer ride and rough road conditions, turn the adjuster clockwise toward HARD.

Brakes

The hydraulic braking systems on your motorcycle dissipate the heat generated by the friction of the brake pads on the brake discs as the wheels are slowed.

As the brake pads wear, the brake fluid level will drop. A leak in the system will also cause the level to drop.

Frequently inspect the system to ensure there are no fluid leaks. Periodically inspect the brake fluid level and the brake pads for wear.


If the brake lever or brake pedal freeplay does not feel within the normal range while riding, check the brake pads for wear (page 128). Worn pads should be replaced. If the pads are not worn beyond the recommended limit, there is probably

air in the brake system. See your Honda dealer to have the air bled from the system.

Front Brake Lever Adjustment

Refer to *Safety Precautions* on page 62 .

The distance between the tip of the brake lever and the grip may be adjusted.

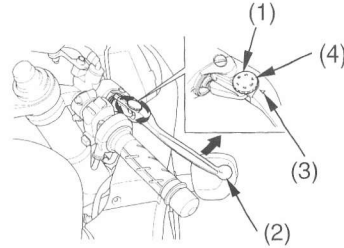

(1) adjuster dial
(2) brake lever

(3) index mark
(4) numbers

1. Turn the adjuster dial (1) while pushing the brake lever (2) forward.
2. Align the index mark (3) on the brake lever with the numbers (4) on the adjuster dial.
3. Apply the brake, release it, then spin the wheel and check that it rotates freely. Repeat this procedure several times.

Brake Fluid Recommendation

brake fluid	Honda DOT 4 Brake Fluid
----------------	----------------------------

The recommended brake fluid is Honda DOT 4 Brake Fluid, or any brake fluid of equal quality and performance. Use fresh brake fluid from a sealed container. Be sure to read the label before opening the sealed container. An opened container may be contaminated or may have absorbed *moisture* from the air.

Fluid Level Inspection

Refer to *Safety Precautions* on page 62 .

If your inspection indicates a low fluid level, have your Honda dealer add the recommended brake fluid.


Do not add or replace brake fluid, except in an emergency. If you do add fluid, have your Honda dealer check the system as soon as possible.

NOTICE

Brake fluid can damage plastic and painted surfaces. Handle with care.


Wipe up spills immediately. Avoid contact with skin or eyes. In case of contact, wash thoroughly and call a doctor immediately if it contacts your eyes.

RIGHT FRONT

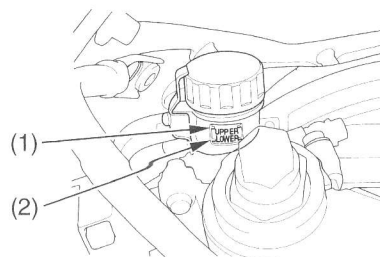

- (1) UPPER level mark
- (2) LOWER level mark

RIGHT SIDE (Rear Brake)

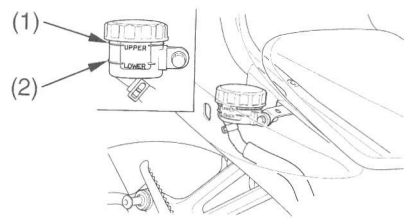

- (1) UPPER level mark
(2) LOWER level mark

1. Place your motorcycle in an upright position on a firm, level surface.
2. Check the fluid level. It should be between the UPPER (1) and LOWER (2) level marks. If the level is at or below the LOWER level mark, check the brake pads for wear (page 128).

Worn pads should be replaced. If the pads are not worn beyond the recommended limit, have your brake system inspected for leaks.

Other Inspections

- Make sure there are no fluid leaks.
- Check for deterioration or cracks in the hoses and fittings.

Brake Pad Wear


Refer to *Safety Precautions* on page 62 .

Brake pad wear depends upon the severity of usage, the type of riding, and road conditions. Generally, the pads will wear faster on wet and dirty roads. Inspect the pads at each regular maintenance interval (page 70).

Always inspect both pads in both the right and left brake calipers.

Front Brake

LEFT FRONT (Right side similar)

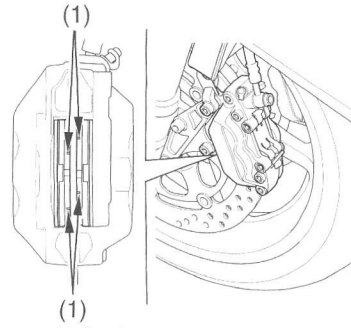


(1) wear indicator grooves

Check the grooves (1) in each pad. If either pad is worn to the bottom of the grooves, replace both pads as a set. See your Honda dealer for this service.

Rear Brake

RIGHT REAR

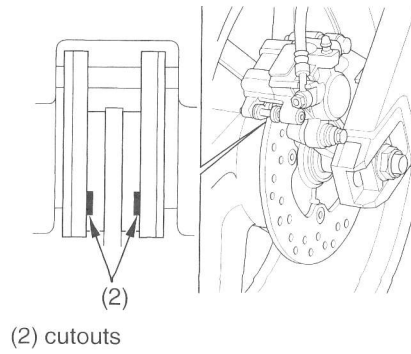

Check the cutouts (2) in each pad. If either pad is worn to the cutout, replace both pads as a set. See your Honda dealer for this service.

Tires

To safely operate your motorcycle, your tires must be the proper type and size, in good condition with adequate tread, and correctly inflated for the load you are carrying.

WARNING

Using tires that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tire inflation and maintenance.

The following pages give detailed information on how and when to check your air pressure, how to inspect your tires

for wear and damage, and our recommendations for tire repair and replacement.

Air Pressure

Refer to *Safety Precautions* on page 62 .

Properly inflated tires provide the best combination of handling, tread life, and riding comfort. Generally, underinflated tires wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Overinflated tires make your motorcycle ride more harshly, are more prone to damage from road hazards, and wear unevenly.

We recommend that you visually check your tires before every ride and use an air pressure gauge to measure the air pressure at least once a month or any time you think the tires might be low. Even tires that are in good condition may lose one to two psi per month if not checked and adjusted regularly.

Tubeless tires have some degree of self-sealing ability if they are punctured. However, because leakage is often very slow, you should look closely for punctures whenever a tire is not fully inflated.

Always check air pressure when your tires are “cold” — after the motorcycle has been parked for at least three hours. If you check air pressure when your tires are

“warm” — even if your motorcycle has only been ridden for a few miles — the readings will be higher. If you let air out of warm tires to match the recommended cold pressures, the tires will be underinflated.

The recommended “cold” tire pressures are:

front	36 psi (250 kPa , 2.50 kgf/cm ²)
rear	42 psi (290 kPa , 2.90 kgf/cm ²)

Inspection


Refer to *Safety Precautions* on page 62 .

Whenever you check the tire pressures, you should also look for:

- Bumps or bulges in the side of the tire or the tread. Replace any tire that has a bump or bulge.
- Cuts, slits, or cracks in the tires. Replace the tire if you can see fabric or cord.
- Nails or other foreign objects embedded in the side of the tire or tread.
- Excessive tread wear.

Also, if you hit a pothole or hard object while riding, pull to the side of the road as soon as you safely can and carefully inspect the tires for damage.

Tread Wear

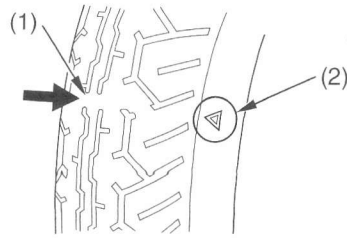

- (1) wear indicator
(2) wear indicator location mark

For the best performance, you should replace a tire before the tread depth at the center reaches the following limits:

front	0.06 in (1.5 mm)
rear	0.08 in (2.0 mm)

If the wear indicators are visible, replace the tire immediately as it is no longer safe.

Tire Repair

Refer to *Safety Precautions* on page 62 .

We strongly recommend that you replace, not repair, any tire that is punctured or damaged. As discussed below, a tire that is repaired, either temporarily or permanently, will have lower speed and performance limits than a new or undamaged tire.

A temporary repair can sometimes be made in an emergency situation. However, since a temporary repair may not hold, you must ride very slowly, preferably without any cargo or passenger, and have the tire replaced or permanently repaired as soon as possible. (For more information on temporary repairs, see *If You Have a Flat Tire*, page 170 .)

Tires

A permanent repair, such as an internal plug patch, can be made if a tire has only a small puncture in the tread area. With such a repair, you should not exceed 50 mph (80 km/h) for the first 24 hours, or 80 mph (130 km/h) at any time thereafter. In addition, you may not be able to safely carry as much weight. If you choose to have a tire repaired, be sure the repair work is performed by a professional and that the wheel is balanced before you ride.

If you have a tire professionally repaired at a non-Honda facility, we recommend that you have the work checked by your Honda dealer.

Tire Replacement

Refer to *Safety Precautions* on page 62 .

The tires that came on your motorcycle were designed to match the performance capabilities of your motorcycle and provide the best combination of handling, braking, durability, and comfort.

You should replace the tires with tires of the same size, load range, and speed rating as the originals.

⚠ WARNING

Installing improper tires on your motorcycle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tires recommended in this owner's manual.

The recommended tires for your motorcycle are:

front	120/70 ZR17M/C (58W) DUNLOP D208FN METZELER MEZ3H FRONT RACING
rear	190/50 ZR17M/C (73W) DUNLOP D208N METZELER MEZ3H RACING

Whenever you replace a tire, remember:

- Have the wheel balanced after the tire is installed.
- Have the tire replaced by your Honda dealer if possible.

(cont'd)

Tires


If you have a tire professionally replaced at a non-Honda facility, we recommend that you have the work checked by your Honda dealer.

Important Safety Reminders

- Do not install a tube inside a tubeless tire on this motorcycle. Excessive heat build-up can cause the tube to burst.
- Use only tubeless tires on this motorcycle. The rims are designed for tubeless tires, and during hard acceleration or braking, a tube-type tire could slip on the rim and cause the tire to rapidly deflate.
- Do not install a bias-ply tire on this motorcycle. Mixing bias-ply and radial tires can adversely affect handling and stability.

Refer to *Safety Precautions* on page 62 .

LEFT SIDE

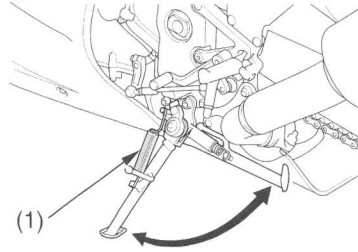

(1) side stand spring

- Check that the side stand assembly is working properly. If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with clean grease.

- Check the spring for damage or loss of tension.
- Check the side stand ignition cut-off system:
 1. Sit astride the motorcycle and put the transmission in neutral.
 2. Raise the side stand.
 3. Start the engine.
 4. Pull the clutch lever in.
 5. Shift the transmission into gear.
 6. Lower the side stand all the way.

The engine should stop as you lower the side stand. If the engine doesn't stop, see your Honda dealer for service.

Drive Chain

An endless (riveted master link) chain connects the countershaft and rear wheel sprockets. The O-ring chain uses rubber rings between the side plates of the pin and roller links to seal in the manufacturer-installed lubricating grease and keep out moisture and dirt.

The service life of the chain depends on proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain or sprockets.

The drive chain should be checked, adjusted, and lubricated as part of the pre-ride inspection (page 33).

Under severe usage, or when the motorcycle is ridden in unusually dusty or muddy areas, more frequent maintenance will be necessary.

Before servicing your drive chain, turn the engine OFF, lower the side stand, and check that your transmission is in neutral.


It is not necessary to remove or replace the drive chain to perform the recommended service in the Maintenance Schedule.

Inspection

Refer to *Safety Precautions* on page 62 .

1. Check slack in the lower drive chain
(1) run midway between the sprockets.
Drive chain slack should allow the following vertical movement by hand:
1 – 1 3/8 in (25 – 35 mm)

LEFT SIDE

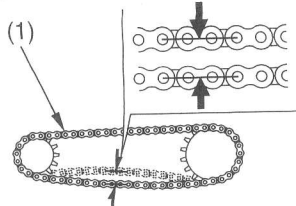

(1) drive chain

2. Check drive chain slack at several points along the chain. The slack should remain constant. If it isn't, some links may be kinked and binding. Lubricating the chain will often eliminate binding and kinking.
3. Inspect the drive chain for:
 - damaged rollers
 - dry or rusted links
 - kinked or binding links
 - excessive wear
 - improper adjustment
 - damaged or missing O-rings


Drive Chain

Replace the drive chain (page 144) if it has damaged rollers, loose pins, or kinks that cannot be freed. Lubricate the drive chain (page 143) if it appears dry or shows signs of rust. Lubricate any kinked or binding links and work them free. Adjust chain slack if needed.

4. Inspect the front and rear sprocket teeth for excessive wear or damage. If necessary, have your Honda dealer replace a worn sprocket.

damaged
sprocket
teeth

REPLACE

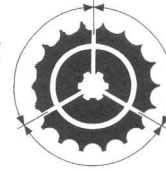

worn
sprocket
teeth

REPLACE


normal sprocket teeth
GOOD

NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.

Wear Inspection

LEFT SIDE

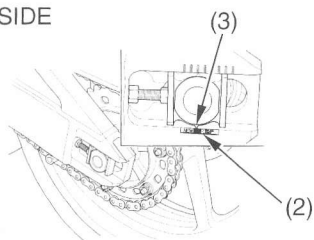

(2) red zone

(3) index line

Check the chain wear label when adjusting the chain. If the red zone (2) on the label aligns with the index line (3) on the chain adjuster plates after the chain has been adjusted to the proper slack, the chain is excessively worn and must be replaced.

The proper slack is:

1 — 1 3/8 in (25 — 35 mm)

The bottom part of the frame may be damaged by excessive drive chain slack of more than:

1 15/16 in (50 mm)


Adjustment

Refer to *Safety Precautions* on page 62 .

Drive chain slack should be checked and adjusted, if necessary, every 500 miles (800 km). When operated at sustained high speeds or under conditions of frequent rapid acceleration, the chain may require more frequent adjustments.

Drive Chain

RIGHT SIDE

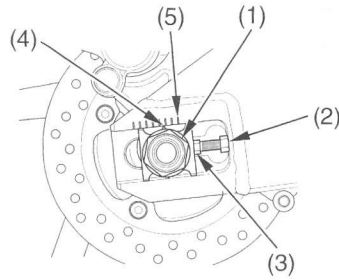

- (1) axle nut
- (2) lock nut
- (3) drive chain adjusting bolt
- (4) index mark
- (5) index line

1. Place the motorcycle on its side stand with the transmission in neutral and the ignition switch OFF.
2. Loosen the axle nut (1).


3. Loosen the lock nuts (2) on both sides of the swingarm.
 4. Turn both adjusting bolts (3) an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting bolts counterclockwise to tighten the chain, Turn the adjusting bolts clockwise and push the rear wheel toward the front to provide more slack. Adjust the chain slack at a point midway between the drive sprocket and the rear wheel sprocket.
- Roll the motorcycle forward. Stop and place it on its side stand. Recheck chain slack. Chain slack should allow the following vertical movement by hand:
1—1 3/8 in (25—35 mm)

5. Check rear axle alignment by making sure the chain adjuster index marks (4) align with the index lines (5) on both sides of the swingarm.
Both marks should correspond. If the axle is misaligned, turn the right or left adjusting bolt until the marks are aligned and recheck chain slack.
6. Torque the rear axle nut to:
94 lbf·ft (127 N·m , 13 kgf·m)
If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to a loss of braking capacity.
7. Tighten the adjusting bolts lightly by turning it counterclockwise, then tighten the lock nuts by holding the adjusting bolts with a wrench.

8. Recheck drive chain slack (page 139).

Lubrication

Refer to *Safety Precautions* on page 62 .

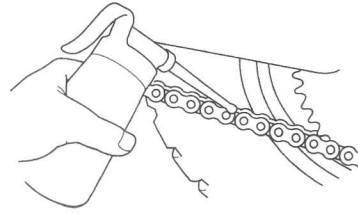

Lubricate every 500 miles (800 km) or sooner if chain appears dry. Lubricant:
SAE 80 or 90 gear oil

Drive Chain

Lubricate only with SAE 80 or 90 gear oil. Commercial chain lubricants may contain solvents which could damage the rubber O-rings.

Removal, Cleaning & Replacement

Refer to *Safety Precautions* on page 62 .

Your motorcycle has an endless (riveted master link) type chain. It should only be removed or replaced by your Honda dealer.

The O-rings can be damaged by steam cleaning, high pressure washers, and certain solvents.

1. Clean the side surfaces of the chain with a dry cloth. Use a high flashpoint solvent such as kerosene — not gasoline.

Do not brush the rubber O-rings.

Brushing will damage them. Use of a solvent may also damage the O-rings.

2. Inspect the drive chain for possible wear or damage.

Replace the drive chain if it has damaged rollers, loose fitting links, damaged O-rings, or otherwise appears unserviceable.

Replacement Chain:

DID50VA8

or

RK50HFOZ5

Your motorcycle has a maintenance-free type battery. You do not have to check the battery electrolyte level or add distilled water as you would with a conventional-type battery.

NOTICE

Your battery is a maintenance-free type and can be permanently damaged if the cap strip is removed.

Electrical accessories use current from the battery — even when the ignition is OFF. Limited operation also allows the battery to discharge. If you have electrical accessories on your motorcycle — or do not ride frequently, we recommend that you charge the battery frequently (see *Battery Charging*, page 149).

If you do not expect to ride your motorcycle for at least two weeks, we recommend you remove the battery — or at least disconnect the battery cables (negative cable first).

If you plan to store your motorcycle, see *Battery Storage*, page 146 .

If your battery seems weak and/or is leaking electrolyte (causing slow starting or other electrical problems), see your Honda dealer.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds. **Wash hands after handling.**

Battery Storage

Refer to *Safety Precautions* on page 62 .

If you plan to store your motorcycle, we recommend you remove the battery and store it where it can be charged at least every 30 days to maintain its service life.

If you do not remove the battery, we recommend disconnecting the battery cables (negative cable first).

You will get the best storage results from removing the battery and slow (trickle) charging it every 30 days (see *Battery Charging*, page 149).

Before you remove the battery, be sure to read all the information that follows, as well as the information on the battery label.

WARNING

The battery gives off explosive hydrogen gas during normal operation.


A spark or flame can cause the battery to explode with enough force to kill or seriously hurt you.

Wear protective clothing and a face shield, or have a skilled mechanic do the battery maintenance.

The battery is located in the battery box below the seat.


1. Remove the front seat (page 78).
2. To remove the battery cover (1), remove the main fuse holder (2).

UNDER FRONT SEAT

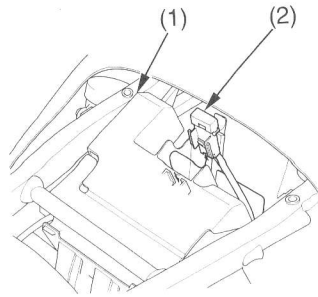

(1) battery cover (2) main fuse holder

3. To open the battery cover (3), remove the clips (4).

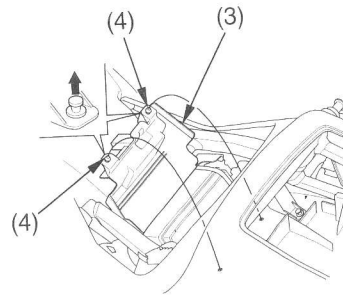


(3) battery cover
(4) clips

(cont'd)

Battery

4. Disconnect the negative (−) terminal lead (5) from the battery first, then disconnect the positive (+) terminal lead (6).

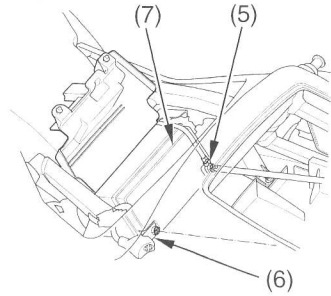


(5) negative (−) terminal lead
(6) positive (+) terminal lead
(7) battery

5. Pull the battery (7) out of the battery box.

6. Charge the battery (see following section), unless you have been riding regularly.
7. Store your battery in an easy-to-reach location off the floor, in an area protected from freezing temperatures and direct sunlight.
8. Clean the battery box after removing the battery for storage. Dry the battery box and, if paint is missing, re-paint the area.
9. Slow charge the battery (see following section) once every 30 days.

Battery Charging

Refer to *Safety Precautions* on page 62 .

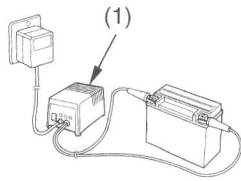

(1) "trickle" charger

Be sure to read the information that came with your battery charger and follow the instructions on the battery. Improper charging may damage the battery.

We recommend using a "trickle" charger (1) for home charging. These units can be left connected for long periods without risking damage to the battery. However, do not intentionally leave the charger connected longer than the time period recommended in the charger's instructions.

Avoid using an automotive-type battery charger. An automotive charger can overheat a motorcycle battery and cause permanent damage.

Appearance Care

Frequent cleaning and polishing will keep your Honda looking newer longer. Frequent cleaning also identifies you as an owner who values your motorcycle. A clean motorcycle is also easier to inspect and service.

General Recommendations

Refer to *Safety Precautions* on page 62 .


- To clean your motorcycle, you may use:
 - water
 - a mild, neutral detergent and water
 - a mild spray and wipe cleaner/polisher
 - a mild spray and rinse cleaner/degreaser and water

- Avoid products that contain harsh detergents or chemical solvents that could damage the metal, paint, and plastic on your motorcycle.
- If your motorcycle is still warm from recent operation, give the engine and exhaust system time to cool off.
- Park in a shady area. Washing your motorcycle in bright sunlight may cause the finish to fade because water droplets intensify the sun's brightness. Spotting is also more likely because surface water can dry before you have time to wipe it off.
- Clean your motorcycle regularly to protect surface finishes.

- We recommend the use of a garden hose to wash your motorcycle. High pressure washers (like those at coin-operated car washes) can damage certain parts of your motorcycle.
- Do not direct water at the air intake (1). The water could enter the air cleaner or be drawn into the throttle body.

NOTICE

High pressure water (or air) can damage certain parts of your motorcycle.

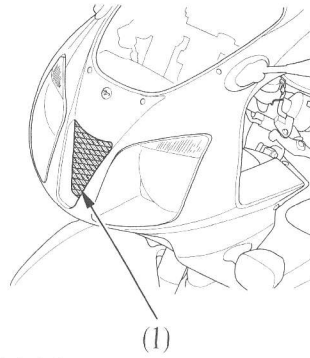

(1) air intake

- After cleaning, inspect for damage, wear, and leaks (fuel, oil, coolant, and brake fluid).

Washing Your Motorcycle with a Mild Detergent

Refer to *Safety Precautions* on page 62 .

1. Rinse your motorcycle thoroughly with cool water to remove loose dirt.
2. Fill a bucket with cool water. Mix in a mild, neutral detergent, such as dish washing liquid or a product made especially for washing motorcycles or automobiles.
3. Wash your motorcycle with a sponge or a soft towel. As you wash, check for heavy grime. If necessary, use a mild cleaner/degreaser to remove the grime.
4. Clean the windscreen with a soft cloth or sponge and plenty of water. Dry with a soft clean cloth. Remove minor

scratches with a commercially-available plastic polishing compound.

Take care to keep brake fluid or chemical solvents off the fairing. They will damage the plastic.

5. Clean the headlight, fairing, meter lens and other plastic parts using a cloth or sponge dampened with a solution of mild detergent and water. When cleaning the plastic headlight lens, use more care because it will scratch easier than a glass lens. Rub any soiled area, gently rinsing it frequently with fresh water.

If the inside of the headlight lens appears clouded immediately after washing, it should clear after a few minutes of riding.

6. After washing, rinse your motorcycle thoroughly with plenty of clean water to remove any residue. Detergent residue can corrode alloy parts.
7. Dry your motorcycle with a chamois or a soft towel. Leaving water on the surface to air dry can cause dulling and water spots. As you dry, inspect for chips and scratches.
8. Lubricate the drive chain to prevent rusting.
9. Start the engine and let it idle for several minutes. The engine heat will help dry moist areas.
10. As a precaution, ride your motorcycle at a slow speed and apply the brakes several times. This will help dry the brakes and restore normal braking performance.

Spray Cleaning Your Motorcycle

Refer to *Safety Precautions* on page 62 .

Avoid using spray cleaner products on the tires or suspension components.

Suggestions for using spray cleaner(s) follow:

Appearance Care

Motorcycle Condition	Recommended Cleaning
Dust and fingerprint smudges.	Apply a spray cleaner/polish and wipe the paint, chrome, glass, and clear plastic.
Light road grime.	Spray any difficult-to-reach or very dirty areas with a spray cleaner/degreaser. Rinse and dry. Apply a spray cleaner/polish and wipe with a non-abrasive cloth.
Heavy grime. Oil leaks. Brake dust.	Use a spray cleaner/degreaser. If necessary, rub with a sponge. Rinse and dry. Apply a spray cleaner/polish and wipe with a non-abrasive cloth.
Dull, corroded chrome or aluminum.	Apply a high quality chrome/aluminum polish and wipe with a non-abrasive cloth.

Painted Aluminum Wheel Maintenance

Refer to *Safety Precautions* on page 62 .

Aluminum may corrode from contact with dirt, mud, or road salt. Clean the wheels after riding through any of these substances. Use a wet sponge and mild detergent. Avoid stiff brushes, steel wool, or cleaners containing abrasives or chemical compounds.

After washing, rinse with plenty of water and dry with a clean cloth.

If the paint is chipped, apply touch-up paint.

Exhaust Pipe Maintenance

The exhaust pipe is stainless steel, but may become stained by oil or mud. If necessary, remove heat stains with a liquid kitchen abrasive.

Finishing Touches

Refer to *Safety Precautions* on page 62 .

After washing your motorcycle, consider using a commercially-available spray cleaner/polish or quality liquid or paste wax to finish the job. Use only a non-abrasive polish or wax made specifically for motorcycles or automobiles. Apply the polish or wax according to the instructions on the container.

If a surface on your motorcycle is chipped or scratched, your Honda dealer has touch-up paint to match your motorcycle's color. Be sure to use your motorcycle's color code (page 196) when you buy touch-up paint.

If the frame has a chip that exposes the metal, first apply primer (to prevent corrosion) and then apply the touch-up paint. Several thin layers of touch-up paint are better than one thick coat.

Here's a few helpful tips on how to store and transport your Honda, and how to be an environmentally responsible motorcycle owner.

Storing Your Honda	158
Transporting Your Motorcycle	161
You & the Environment	162

Storing Your Honda

If you won't be riding for an extended period, such as during the winter, thoroughly inspect your motorcycle and correct any problem before storing it. That way, needed repairs won't be forgotten and it will be easier to get your motorcycle running again.

For more information about storage, refer to the *Honda Motorcycle Winter Storage Guide*, available from your Honda dealer (USA only).

We suggest you perform the following procedures to keep your motorcycle in top condition. These storage procedures will reduce the deterioration that can occur during storage.

Preparation for Storage

Refer to *Safety Precautions* on page 62 .

1. Change the engine oil and filter (page 94).
2. Make sure the cooling system is filled with a 50/50% antifreeze solution (page 99).
3. Fill the fuel tank. Make sure the fuel fill cap is properly installed.

4. To prevent rusting in the cylinders, perform the following:
 - Remove the spark plug caps from the spark plugs. Using tape or string, secure the caps to any convenient plastic body part so that they are positioned away from the spark plugs.
 - Remove the spark plugs from the engine and store them in a safe place. Do not connect the spark plugs to the spark plug caps.
 - Pour a tablespoon (15 – 20 cc) of **clean engine oil into each cylinder** and cover the spark plug holes with a piece of cloth.
 - With the engine stop switch in the RUN position, press the start button several times to crank the engine and distribute the oil.
- Reinstall the spark plugs and spark plug caps.
5. Remove the battery and charge it fully. Store it in an area protected from freezing temperatures and direct sunlight. Slow charge the battery (page 149) once a month.
6. Wash and dry your motorcycle. Wax all painted surfaces. Apply rust-inhibiting oil to the chrome pieces.

Storing Your Honda

7. Lubricate the drive chain (page 143).
8. Inflate the tires to their recommended pressures (page 131).
9. Store your motorcycle in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
10. Place your motorcycle on blocks to lift both tires off the floor.
11. Cover your motorcycle with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

Removal from Storage

Refer to *Safety Precautions* on page 62 .

1. Uncover and clean your motorcycle.
2. If your motorcycle has been stored for more than four months — change the engine oil (page 94).
3. If your motorcycle has been stored for more than two months — ask your Honda dealer to drain and replace the fuel.
4. Charge the battery (page 149) as required. Install the battery.
5. Lubricate the drive chain (page 143).
6. Perform a pre-ride inspection (page 33), then test-ride your motorcycle at low speeds.

If your motorcycle needs to be transported, it should be carried on a motorcycle trailer, or a truck or trailer with a flatbed area. For information about 24-hour emergency assistance, see page 221 (USA only). Do not tow your motorcycle, as towing can seriously damage the transmission.

When contacting a towing or transporting service, be sure to ask if they have a flatbed area, a loading ramp or power ramp to safely lift the motorcycle, and motorcycle tie-down straps.

You & the Environment

Owning and riding a motorcycle can be enjoyable, but you must do your part to protect nature.

Following are tips on how you can be an environmentally-responsible motorcycle owner.

- **Choose Sensible Cleaners.** Use a biodegradable detergent when you wash your motorcycle. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer. Don't throw cleaning solvents away; see the following guidelines for proper disposal.

- **Recycle Wastes.** It's illegal and thoughtless to put used engine oil in the trash, down a drain, or on the ground. Used oil, gasoline, coolant, and cleaning solvents contain poisons that can hurt refuse workers and contaminate our drinking water, lakes, rivers, and oceans. Before changing your oil, make sure you have the proper containers. Put oil and other toxic wastes in separate sealed containers and take them to a recycling center. Call your local or state office of public works or environmental services to find a recycling center in your area, and to get instructions on how to dispose of non-recyclable wastes.

Taking Care of the Unexpected

This section discusses the more common problems that can occur with your motorcycle while you're riding. It tells you how to evaluate each problem and what actions you can take to try to resume riding. If the problem cannot be safely solved, this section also gives instructions on the proper way to have your motorcycle transported.

For information about transporting your motorcycle, see page 161 .

General Guidelines	164
If Your Engine Quits or Won't Start	165
If You Have a Flat Tire	170
If Your Engine Overheats	183
If the Low Oil Pressure Indicator Lights	185
If a Fuse Blows.....	186
If You Crash	190
If You Lose Your Key	191
If Your Battery is Low (or Dead)	192

General Guidelines

Keeping your motorcycle well-maintained is the best way to reduce the possibility of having a problem on the road. However, since problems can arise even with well-maintained machines, you may consider subscribing to an emergency roadside service plan. (USA only: For information about the Honda Rider's Club of America, see page 221.)

Remember to take along your owner's manual, the tool kit that came with your motorcycle, and any other items (such as tire repair supplies and additional tools) that might help you solve a problem on your own.

Should you ever have a problem while riding, please follow these guidelines:

- Always put personal safety first.
- Take time to assess the situation and your options before deciding what to do.
- If the problem is relatively minor and you have the tools, supplies, and skills to make a temporary repair, be sure to have permanent repairs made as soon as possible.
- Do not continue riding if you are hurt or your motorcycle is not in safe riding condition.

Additional recommendations for specific problems follow.

If Your Engine Quits or Won't Start

Proper operation and maintenance can prevent starting and engine performance problems. In many cases, the cause of the problem may be a simple operational oversight.

If you have a problem starting the engine — or experience poor engine performance — the following information may help you. If you can't correct the problem, see your Honda dealer.

If your motorcycle won't start, listen as you press the start button. If you don't hear the starter motor turning, refer to the *Starter motor doesn't operate* symptom. If you can hear the starter motor working normally, refer to the *Starter motor works, but the engine won't start* symptom.

If Your Engine Quits or Won't Start

SYMPTOM: Starter motor doesn't operate.	
POSSIBLE CAUSE	WHAT TO DO
ignition switch OFF	Turn the ignition switch ON.
engine stop switch OFF	Turn the engine stop switch to RUN.
transmission not in neutral	Shift into neutral.
side stand down (when transmission not in neutral)	Put the transmission in neutral or raise the side stand and pull the clutch lever in.
blown fuse	Replace with a new fuse of the same rating (page 186).
battery lead loose	Tighten the battery lead.
dead battery	Charge the battery (page 149). If charging doesn't help, see your Honda dealer.
faulty starter motor	If all possible causes are negative, the starter motor may be faulty. See your Honda dealer.

If Your Engine Quits or Won't Start

SYMPTOM: Starter motor works, but the engine won't start.	
POSSIBLE CAUSE	WHAT TO DO
out of fuel	Fill the fuel tank.
flooded engine	See <i>Flooded Engine</i> (page 44).
loose or unconnected spark plug caps	Install the spark plug caps securely. If the engine still won't start, see your Honda dealer.
loose battery cables	Tighten the battery terminal bolts.
weak battery	Charge the battery (page 149). If charging doesn't help, see your Honda dealer.

If Your Engine Quits or Won't Start

SYMPTOM: Engine starts, but stalls as you shift into gear.	
POSSIBLE CAUSE	WHAT TO DO
side stand down	Raise the side stand. Start again.

SYMPTOM: Engine starts, but runs poorly.	
POSSIBLE CAUSE	WHAT TO DO
idles roughly, too fast, stalls	Check engine idle adjustment (page 109). If the problem persists, see your Honda dealer.
overheating	Check the coolant temperature gauge. Refer to <i>If Your Engine Overheats</i> , page 183.
low oil pressure	Check the low oil pressure indicator. Refer to <i>If the Low Oil Pressure Indicator Lights</i> , page 185.
runs erratically, misfires	See your Honda dealer.
blubbers (rich fuel mixture)	See your Honda dealer.

If Your Engine Quits or Won't Start

SYMPTOM: Engine starts, but runs poorly. (cont'd)	
POSSIBLE CAUSE	WHAT TO DO
sooty exhaust (rich fuel mixture)	See your Honda dealer.
detonates or pings under load	If applicable, switch to the recommended octane gasoline (page 86) or change your brand of gasoline. If the problem persists, see your Honda dealer.
afterfires (backfires)	See your Honda dealer.
pre-ignition (runs on after ignition switched OFF)	See your Honda dealer.

If You Have a Flat Tire

A flat tire is always unwelcome, especially if you are far from help. If you think you are losing air, or you hit a pothole or hard object, pull safely to the side of the road so you can inspect the tires and assess the situation. (Be sure to park on a firm, level surface and use the side stand for support.) You should examine the tire treads and sidewalls for foreign objects or damage. If you find a tire that has been punctured or damaged, you have two options.

Option 1:

Have Your Motorcycle Transported

If a tire has a major puncture or a cut in the tread or sidewall, or the bead has come loose from the rim, there is probably not much you can do except have your motorcycle transported to a Honda dealer

or other qualified service facility. (USA only: For information about 24-hour emergency roadside assistance, see page 221 .) Even with a simple puncture, this may be the safest and least troublesome solution. For transporting instructions, see page 161 .

Option 2:

Make a Temporary Roadside Repair

If a tire has only a minor nail puncture and is not completely flat, you may be able to make an emergency repair that could allow you to continue riding to where you can get the tire replaced or permanently repaired.

WARNING

Riding your motorcycle with a temporary tire repair can be risky. If the temporary repair fails, you can crash and be seriously injured or killed.

If you must ride with a temporary tire repair, ride slowly and carefully and do not exceed 30 mph (50 km/h) until the tire is permanently repaired or replaced.

Due to the uncertainty of any temporary repair, you should ride slowly (not over 30 mph, 50 km/h) and carefully (preferably without a passenger or cargo) until the tire is replaced or permanently

repaired. Stop frequently and check the air pressure. If the tire is losing pressure, it may be unsafe to continue riding. As the tire gets low, it will affect the handling of your motorcycle (especially with a passenger and cargo) and it may overheat and blow out.

Types of Temporary Repairs

The following types of temporary repairs generally require a source of air to inflate the tire. Possible sources include CO₂ cartridges or cans of compressed air designed to inflate a tire.

If You Have a Flat Tire

- **Inflate the tire:** Tubeless tires have some self-sealing ability if they are punctured and the result is usually just a slow leak. If this is the case, you can try inflating the tire to see if it will hold air pressure. If you can see a nail or other object embedded in the tire tread, do not remove it at this time.
- **Plug the hole:** The idea here is to do something to temporarily stop the leak. If you have a tubeless tire repair kit, you can pull out the nail and try inserting an external plug in the puncture. Follow the instructions that came with the repair kit and be sure to inflate the tire to the correct pressure.

Should You Repair or Replace a Tire?

We strongly recommend that you replace, not permanently repair, any tire that is punctured or damaged, even if the tire has only a minor puncture. For a full discussion of repairs and replacement, see page 133.

Emergency Front Wheel Removal/Installation

Refer to *Safety Precautions* on page 62 .


We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

Removal

1. Park your motorcycle on a firm, level surface.
2. Raise the front wheel off the ground by placing a support block under the engine.

3. Remove the fixing bolts (1) and remove the reflectors and right and left caliper assemblies (2) from the fork legs.

RIGHT SIDE

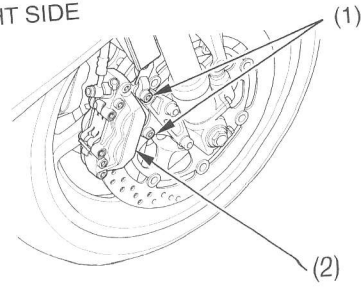

- (1) fixing bolts
(2) brake caliper assembly


(cont'd)

If You Have a Flat Tire

- To avoid damage to the brake hose during removal, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.
- Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

4. Remove the axle bolt (3), and then loosen the right and left axle pinch bolts (4).

RIGHT FRONT

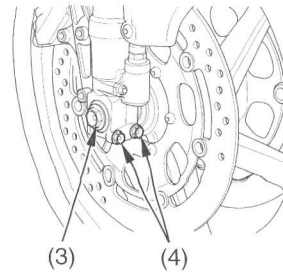


- (3) axle bolt
(4) axle pinch bolts

5. Remove the front axle shaft (5), wheel and side collar.

- Avoid depressing the brake lever when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

LEFT FRONT

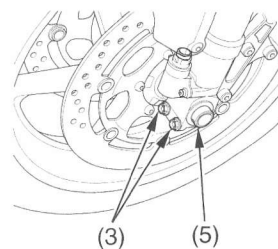

(5) front axle shaft

Installation


1. Install the side collars and position the wheel between the fork legs. Insert the front axle shaft from the left side, through the left fork leg and wheel hub.

(cont'd)

If You Have a Flat Tire

2. Align the index line (6) of the front axle shaft with the recessed surface (7) of the fork leg.

LEFT FRONT

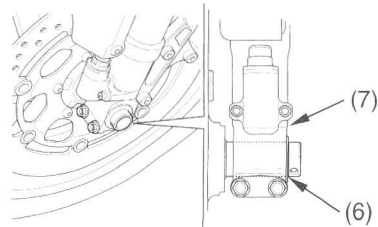


- (6) index line
(7) surface of fork leg

3. Temporarily tighten the axle pinch bolts on the left fork leg until lightly seated.
4. Tighten the axle bolt to the specified torque:
43 lbf·ft (59 N·m , 6.0 kgf·m)
5. Tighten the axle pinch bolts on the right fork leg to the specified torque:
16 lbf·ft (22 N·m , 2.2 kgf·m)
6. Fit the brake disc carefully between the brake pads to avoid damaging the pads.
7. Install the caliper fixing bolts and tighten to the specified torque:
22 lbf·ft (30 N·m , 3.1 kgf·m)
8. Operate the front brake and pump the fork several times. Check for free wheel rotation after the brake is released. Recheck the wheel if the brake drags or the wheel does not rotate freely.


9. Measure the clearance (8) between the brake disc (9) and the caliper body (10) on each side with a 0.028 in (0.7 mm) feeler gauge (11).
- If the feeler gauge inserts easily, remove it and tighten the left axle pinch bolts to the specified torque:
16 lbf·ft (22 N·m, 2.2 kgf·m)
 - If the feeler gauge cannot be inserted easily, loosen the left axle pinch bolt and pull the left fork outward or push inward to adjust the clearance. Then tighten the axle pinch bolts to the specified torque.

Failure to provide adequate disc-to-caliper body clearance may damage the brake discs and impair braking efficiency.

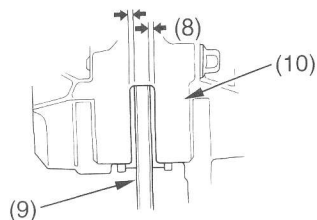

(8) clearance
(9) brake disc
(10) caliper body

LEFT FRONT

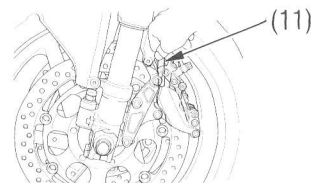

(11) feeler gauge

If You Have a Flat Tire

10. After installing the wheel, apply the brakes several times, then recheck both discs for caliper body to disc clearance. Do not operate the motorcycle without adequate clearance.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.

Emergency Rear Wheel Removal/Installation

Refer to *Safety Precautions* on page 62 .


We recommend wheel removal be done only by your Honda dealer or another qualified mechanic. Do not attempt to remove the wheel on your own. Wheel removal requires mechanical skill and professional tools.

Removal

1. Park your motorcycle on a firm, level surface.
2. Raise the rear wheel off the ground by placing a support block under the engine.

3. Loosen the rear axle nut (1).
4. Loosen the drive chain adjuster lock nuts (2) and turn the adjusting bolts (3) so the rear wheel can be moved all the way forward for maximum drive chain slack.

RIGHT REAR

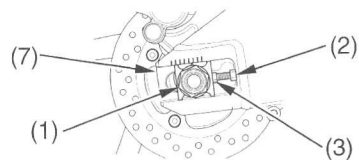


- (1) axle nut
(2) lock nut
(3) adjusting bolt
(7) right chain adjustment plate
5. Remove the rear axle nut (1) and washer.

If You Have a Flat Tire

6. Remove the drive chain (4) from the rear sprocket by pushing the rear wheel forward.

LEFT REAR

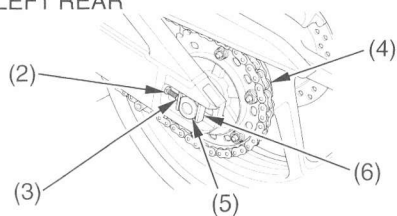

- (4) drive chain
(5) rear axle shaft
(6) left chain adjustment plate


7. Remove the rear axle shaft (5), rear wheel, left chain adjustment plate (6), right chain adjustment plate (7), rear brake bracket and side collars from the swingarm.

- To avoid damage to the brake hose during removal, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.
- Avoid depressing the brake pedal when the wheel is off the motorcycle. This will force the caliper pistons out of the cylinders. The result will be a loss of brake fluid. If this occurs, the brake system will require service. See your Honda dealer for this service.

Installation

1. Install the side collars and position the wheel and rear brake bracket.
 - While installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

2. Make sure that the lug (8) on the swingarm (9) is located in the slot (10) on the rear brake bracket.

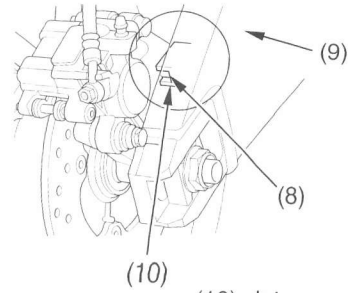

(8) lug
(9) swingarm

(10) slot

If You Have a Flat Tire

3. Insert the rear axle shaft from the left side, through the left swingarm, wheel hub and rear brake bracket.
4. Install the drive chain by pushing the rear wheel forward.
5. Install the rear axle nut and tighten the drive chain adjusting bolts.
Refer to drive chain adjustment (page 142).
6. Tighten the axle nut to the specified torque:
94 lbf·ft (127 N·m , 13 kgf·m)
Failure to provide adequate disc-to-rear brake bracket clearance may damage the brake discs and impair braking efficiency.
7. After installing the wheel, apply the brakes several times, then recheck both discs for caliper holder to disc clearance.
Do not operate the motorcycle without adequate clearance.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capability.

Normally, the coolant temperature on your temperature meter will rise and then level off. Hot weather may cause the temperature to rise higher than normal. So will temporary stress such as climbing a hill. If you're stuck in stop-and-go traffic, the temperature may climb some, but the radiator fan is designed to prevent overheating. Be aware of these variations as you monitor the meter.

If the multi-function display begins to flash and the coolant temperature indicator goes on the display for no apparent reason, pull safely to the side of the road. If possible, park in a shady area.

NOTICE

Continuing to ride with an overheated engine can cause serious engine damage.

- A steaming engine indicates a coolant leak. Shut the engine off and wait until the steaming stops. Look for a leak, but don't touch the engine or radiator system. Let everything cool off first.
- If there's no obvious problem, leave the engine on so the fan and coolant circulating system can continue working. Monitor the temperature meter. The temperature may drop to the normal range after a brief stop with no load on the engine.

If Your Engine Overheats

- Check the radiator fan.

If the fan is not working, turn the engine off. Open the fuse box (page 188) and check the radiator fan fuse.

If the fuse is blown, replace it with the proper (same rating) spare fuse. Start the engine. If the indicators go on and stay on, turn the engine off.

If the radiator fan is working, visually check the coolant level in the reserve tank, located behind the left lower fairing (page 100). It isn't necessary to touch the radiator system.

- If the reserve tank is low or empty, don't ride without adding coolant (page 100). After adding coolant, turn the engine on and check the temperature meter. If the temperature doesn't drop, do not ride. The engine needs repair. Transport

your motorcycle to a Honda dealer (page 161).

If the temperature drops to normal, check the coolant level. If it has gone down, add more coolant.

If you are able to resume riding, continue to monitor the gauge frequently.

If there's a mild leak, you can ride for awhile, carefully watching the meter. Be prepared to stop and add more coolant or water. If the leak is bad, transport your motorcycle to a Honda dealer (page 161).

If the Low Oil Pressure Indicator Lights

If you check your engine oil level regularly, you should never see the low oil pressure indicator while riding. Normally, it will only light momentarily when you turn the ignition switch ON. Occasionally, it may flicker at or near idling speed.

Low oil pressure may be caused by an oil leak, a low oil level, or some problem in the engine's lubrication system.

If the indicator comes on while you're riding, don't ignore it. Pull safely to the side of the road. If possible, pull the clutch lever in and coast to a stop. Stop the engine as soon as it's safe to do so.

NOTICE

Continuing to ride with low oil pressure can cause serious engine damage.

- Check for an oil leak.
- Then check the oil level. If necessary, add the recommended oil (page 90) to the upper level mark. If you must leave your motorcycle to get oil, secure it as much as possible.
- After adding oil, start the engine, and check that the low oil pressure indicator goes off. Check for a possible leak. If the indicator goes off and there is no leak — resume riding. If there is a leak — do not ride the motorcycle until the leak is repaired by a Honda dealer.

If a Fuse Blows

All of the electrical circuits on your motorcycle have fuses to protect them from damage caused by excess current flow (short circuit or overload).

If something electrical on your motorcycle stops working, the first thing you should check for is a blown fuse.

Determine from the chart on the circuit fuse box cover which fuse or fuses control that component. Check those fuses first, but check all the fuses before looking elsewhere for another possible cause of the problem. Replace any blown fuses and check component operation.


- Main fuse A (and spare) are located on the starter motor magnetic switch (2) behind the rear cowl.
- Main fuse B is located under the seat.
- The circuit fuse boxes (including spare fuses) are located behind the left lower fairing.

Recommended Fuses


main fuse A	30A
main fuse B	30A
other fuses	20A , 10A

1. To prevent an accidental short circuit, turn the ignition switch OFF before checking or replacing the fuses.
2. Remove the front seat (page 78) and the rear cowl (page 81).

LEFT SIDE

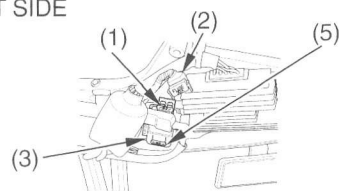

UNDER FRONT SEAT

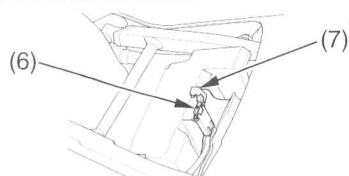


- (1) main fuse A
- (2) wire connector
- (3) starter magnetic switch
- (5) spare main fuse A
- (6) main fuse B
- (7) main fuse B cover

Main Fuse Access:

3. To access the main fuse A (1), disconnect the wire connector (2) of the starter magnetic switch (3).
4. Pull main fuse A out.
If it is blown (4), install spare main fuse A (5).

MAIN FUSE

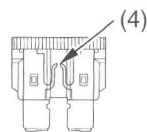


(4) blown fuse

5. Reconnect the wire connector.
6. To access main fuse B (6), open the main fuse B cover (7).
7. Pull main fuse B out.
If it is blown, install a new main fuse B.
8. Close the main fuse B cover.
9. Install the rear cowl and the front seat.

If a Fuse Blows

Circuit Fuse Access:


10. Remove the left lower fairing (page 82)
11. Open the fuse box cover (8).

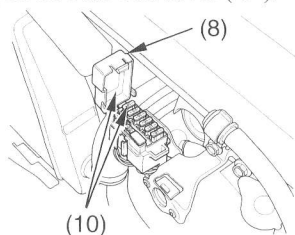

(8) fuse box cover (10) spare fuses

12. To check or replace a circuit fuse, pull the old fuse out of its retaining clips. Look for a burned wire inside the fuse. If the fuse is blown (9), replace it with a spare fuse (10) of the same rating or lower.

 CIRCUIT FUSE



(9) blown fuse

13. Close the fuse box covers.
14. Install the left lower fairing.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If you do not have a spare fuse and you cannot ride the motorcycle without fixing the problem, take a fuse of the same rating or a lower rating from one of the other circuits that you can do without temporarily.

If you replace a blown fuse with a spare fuse that has a lower rating, replace the fuse with the correct rating as soon as you can. Also remember to replace any spare fuses that were installed.

If the replacement fuse of the same rating burns out in a short time, there is probably a serious electrical problem on your motorcycle. Leave the blown fuse in that circuit and have your motorcycle checked by your Honda dealer.

If You Crash

Personal safety is your first priority after any accident. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the accident.

If you decide you are capable of riding safely, carefully inspect your motorcycle for damage and determine if it is safe to ride. Check the tightness of critical nuts and bolts securing such parts as the handlebar, control levers, brakes, and wheels.

If there is minor damage, or you are unsure about possible damage, ride slowly and cautiously. Sometimes, crash damage is hidden or not immediately apparent, so you should have your motorcycle thoroughly checked at a qualified service facility as soon as possible. Also, be sure to have your Honda dealer check the frame and suspension after any serious crash.

If your motorcycle cannot be ridden, see *Transporting Your Motorcycle*, page 161.

If You Lose Your Key

Be sure to record your key number in the Quick Reference section at the rear of the manual. You'll need this number to have a duplicate key made.

A lost key won't be a problem if you take preventative action. Store one duplicate key in a safe place at home and carry a second duplicate in your wallet.

If you lose your key and aren't carrying a duplicate, either get your spare or have one made. If you don't know your key number, call the dealer you purchased your Honda from. They may have it listed in their records. If they don't, transport your motorcycle to them or the nearest Honda dealer. The dealer will probably have to remove the ignition switch assembly to find the key number so they can make a key for you.

If Your Battery is Low (or Dead)

Jump starting is not recommended, especially if you use an automobile battery. The greater amperage of an automobile battery when the car engine is running can damage your motorcycle's electrical system.

Bump starting is also not recommended.

If you can't charge the battery or it appears unable to hold a charge, contact your Honda dealer.

This section contains dimensions, capacities, and other technical data, plus information on government requirements and how to break-in your motorcycle.

Vehicle Identification.....	194
Specifications	197
Break-in Guidelines.....	204
Emission Control Systems	205
Oxygenated Fuels	211


Vehicle Identification

Serial Numbers

The frame, VIN, and engine serial numbers are required when you register your motorcycle. They may also be required when ordering replacement parts. You may record these numbers in the Quick Reference section at the rear of this manual.

The VIN (vehicle identification number) appears on the Safety Certification Label attached to the right side of the frame.


RIGHT SIDE

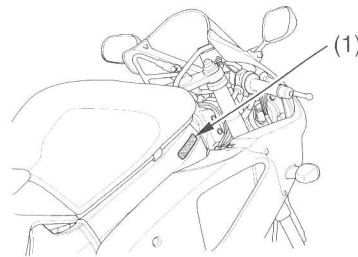

(1) VIN

The frame number (2) is stamped on the right side of the steering head.


RIGHT SIDE

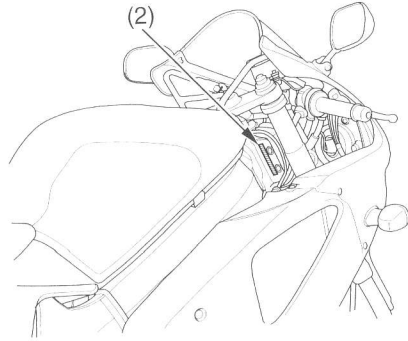

(2) frame number

The engine number (3) is stamped on the top of the crankcase.

LEFT SIDE

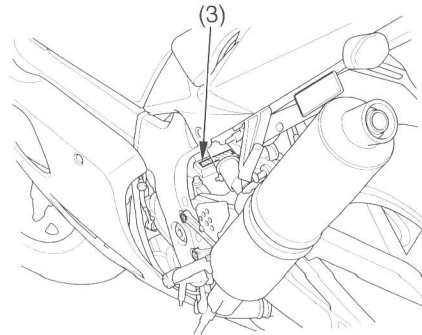


(3) engine number

Color Label & Code

The color label is attached to the storage compartment under the rear seat. Remove the rear seat (page 79) to check the label.

The color code is helpful when ordering replacement parts. You may record the color and code in the Quick Reference section at the rear of this manual.

UNDER REAR SEAT

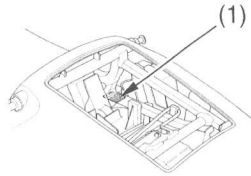

(1) color label

Dimensions	
overall length	81.1 in (2,060 mm)
overall width	28.5 in (725 mm)
overall height	45.1 in (1,145 mm)
wheelbase	55.9 in (1,420 mm)
ground clearance	5.1 in (130 mm)

Weight	
dry weight	430 lbs (195 kg)
	432 lbs (196 kg) California only

Specifications

Fuel & Lubricants	
fuel recommendation	unleaded gasoline, pump octane number of 91 or higher
fuel tank capacity	4.76 US gal (18.0 ℓ)
engine oil capacity	after disassembly: 4.5 US qt (4.3 ℓ) after draining: 3.7 US qt (3.5 ℓ) after draining & oil filter change: 4.1 US qt (3.9 ℓ)
engine oil recommendation	API Service Classification SG or higher except oils labeled as energy conserving on the circular API service label, SAE 10W-40, JASO T 903 standard MA, Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil (USA & Canada) or Honda 4-stroke oil (Canada only), or an equivalent motorcycle oil
drive chain lubricant	SAE 80 or 90 gear oil
cooling system, recommendation	Pro Honda HP Coolant or an equivalent high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminum engines
cooling system, capacity	3.1 US qt (2.9 ℓ)

Capacities	
passenger capacity	Operator and one passenger
maximum weight capacity	USA: 366 lbs (166 kg) Canada: 375 lbs (170 kg) rider, passenger, all cargo and accessories

Engine Specifications	
displacement	60.9 cu-in (999 cm ³)
bore & stroke	3.94 x 2.50 in (100.0 x 63.6 mm)
compression ratio	10.8 : 1
spark plug (standard)	IFR9H11 (NGK) or VK27PRZ11 (DENSO)
spark plug (cold climate)	IFR8H11 (NGK) or VK24PRZ11 (DENSO)
spark plug gap	0.031—0.035 in (0.80—0.90 mm) no adjustment
valve clearance (cold)	intake 0.006 in (0.16 mm) exhaust 0.012 in (0.31 mm)
idle speed	1,300 ± 100 rpm

Specifications

Power Transmission	
primary reduction	1.700
gear ratio, 1st	2.461
2nd	1.812
3rd	1.428
4th	1.240
5th	1.080
6th	0.962
final reduction	2.500
standard sprocket sizes	drive (engine) sprocket: 16 driven (rear wheel) sprocket: 40
final drive	chain DID50VA8 or RK50HFOZ5

Chassis & Suspension	
caster	23°50'
trail	3.7 in (95 mm)
tire size, front	120/70 ZR17M/C (58W)
tire size, rear	190/50 ZR17M/C (73W)
tire pressure, front (cold)	36 psi (250 kPa , 2.50 kgf/cm ²)
tire pressure, rear (cold)	42 psi (290 kPa , 2.90 kgf/cm ²)

Electrical	
battery	12V – 10AH
generator	0.33kW/5,000rpm

Specifications

Lights	
headlight	12V—55/55W (2 bulbs)
brake/tail light	12V—21/5W (2 bulbs)
turn signal lights	12V—32/3 cp (front)
	12V—32 cp (rear)
license light	12V—8W

Fuses	
main A	30A
main B	30A
other fuses	20A , 10A

Torque Specifications	
oil drain bolt	22 lbf·ft (29 N·m , 3.0 kgf·m)
oil filter	20 lbf·ft (26 N·m , 2.7 kgf·m)
front wheel axle bolt	43 lbf·ft (59 N·m , 6.0 kgf·m)
front wheel caliper fixing bolts	22 lbf·ft (30 N·m , 3.1 kgf·m)
front wheel axle pinch bolts	16 lbf·ft (22 N·m , 2.2 kgf·m)
rear wheel nuts	94 lbf·ft (127 N·m , 13 kgf·m)

Break-in Guidelines

Help assure your motorcycle's future reliability and performance by paying extra attention to how you ride during the first 300 miles (500 km).


During this period, avoid full-throttle starts and rapid acceleration.

Exhaust Emission Requirements

The U. S. Environmental Protection Agency (EPA), the California Air Resources Board (CARB), and Transport Canada require that your motorcycle comply with applicable exhaust emissions standards during its useful life, when operated and maintained according to the instructions provided.

The Vehicle Emission Control Information label (1) (2) is attached on the left side of the frame.

The Vacuum Hose Routing Diagram label (3) is attached to the air cleaner housing under the fuel tank (California only).

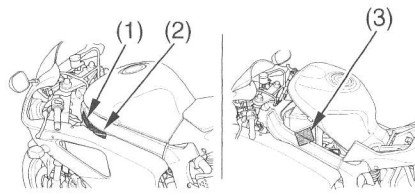

- (1) vehicle emission control information label
- (2) vehicle emission control information label (Canada only)
- (3) vacuum hose routing diagram label

Emission Control Systems

Noise Emission Requirements

The EPA also requires that motorcycles built after January 1, 1983 comply with applicable noise emission standards for one year or 3,730 miles (6,000 km) after the time of sale to the ultimate purchaser, when operated and maintained according to the instructions provided. (USA only)

Warranty Compliance

Compliance with the terms of the Distributor's Warranties for Honda Motorcycle Emission Control Systems is necessary in order to keep the emissions system warranty in effect. (USA only)

Source of Exhaust Emissions

The combustion process produces carbon monoxide (CO), oxides of nitrogen (NO_x), and hydrocarbons (HC). Control of hydrocarbons and oxides of nitrogen is very important because, under certain conditions, they react to form photochemical smog when subjected to sunlight. Carbon monoxide does not react in the same way, but it is toxic.

Honda Motor Co., Ltd. utilizes PGM-FI and other systems to reduce carbon monoxide, oxides of nitrogen, and hydrocarbons.

Exhaust Emission Control System

The exhaust emission control system includes a secondary air supply system and a PGM-FI system.

No adjustment to these systems should be made although periodic inspection of the components is recommended.

Ignition Timing Control System

The system constantly adjusts the ignition timing, reducing the amount of HC, CO and NO_x produced.

PGM-FI System

The PGM-FI system uses sequential multiport fuel injection. It has four subsystems: Air Intake, Engine Control, Fuel Control, and Exhaust Control. The Engine Control Module (ECM) uses various sensors to determine how much air is going into the engine. It then controls how much fuel to inject under all operating conditions.

Secondary Air Injection System

The secondary air injection system introduces filtered air into the exhaust gases in the exhaust port. The secondary air injection system helps improve emission performance.

Emission Control Systems

Evaporative Emission Control System (California only)

This motorcycle complies with the requirements of the California Air Resources Board (CARB) evaporative emission regulations. Fuel vapor from the fuel tank is directed into the charcoal canister and air cleaner where it is adsorbed and stored while the engine is stopped. When the engine is running and the purge control solenoid valve is open, fuel vapor in the charcoal canister and air cleaner is drawn into the engine through the throttle body.

Crankcase Emission Control System

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and the intake manifold.

Problems That May Affect Motorcycle Exhaust Emissions

If you are aware of any of the following symptoms, have the vehicle inspected and repaired by your authorized Honda motorcycle dealer.

Symptoms:

1. Hard starting or stalling after starting
2. Rough idle
3. Misfiring or backfiring during acceleration
4. After-burning (backfiring)
5. Poor performance (driveability) and poor fuel economy

Noise Emission Control System

TAMPERING WITH THE NOISE CONTROL SYSTEM IS PROHIBITED:

U. S. federal law prohibits, or Canadian provincial laws may prohibit the following acts or the causing thereof: (1) The removal or rendering inoperative by any person, other than for purposes of maintenance, repair or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

Emission Control Systems

AMONG THOSE ACTS PRESUMED
TO CONSTITUTE TAMPERING ARE
THE FOLLOWING ACTS:

1. Removal of, or puncturing the muffler, baffles, header pipes or any other component which conducts exhaust gases.
2. Removal of, or puncturing of any part of the intake system.
3. Lack of proper maintenance.
4. Replacing any moving parts of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

Some conventional gasolines are being blended with alcohol or an ether compound. These gasolines are collectively referred to as oxygenated fuels. To meet clean air standards, some areas of the United States and Canada use oxygenated fuels to help reduce emissions. If you use an oxygenated fuel, be sure it is unleaded and meets the minimum octane rating requirement.

Before using an oxygenated fuel, try to confirm the fuel's contents. Some states/provinces require this information to be posted on the pump.

The following are the EPA-approved percentages of oxygenates:

ETHANOL (ethyl or grain alcohol) 10% by Volume

You may use gasoline containing up to 10% ethanol by volume. Gasoline containing ethanol may be marketed under the name "Gasohol."

MTBE (Methyl Tertiary Butyl Ether) 15% by Volume

You may use gasoline containing up to 15% MTBE by volume.

Oxygenated Fuels

METHANOL (methyl or wood alcohol)
5% by Volume

You may use gasoline containing methanol containing up to 5% methanol by volume as long as it also contains cosolvents and corrosion inhibitors to protect the fuel system. Gasoline containing more than 5% methanol by volume may cause starting and/or performance problems. It may also damage metal, rubber, and plastic parts of your fuel system.

If you notice any undesirable operating symptoms, try another service station or switch to another brand of gasoline.

Fuel system damage or performance problems resulting from the use of an oxygenated fuel containing more than the percentages of oxygenates mentioned above are not covered under warranty.

Oxygenated fuels can damage paint and plastic. Be careful not to spill fuel when filling the fuel tank. Wipe up any spills immediately.

NOTICE

Oxygenated fuels can damage paint and plastic. Damage caused by spilled fuel is not covered by warranty.

Consumer Information

This section contains information on your warranty and how to get an official Honda service manual.

Authorized Manuals	214
Warranty Coverage	217
Warranty Service	218
Contacting Honda	219
Your Honda Dealer	220
The Honda Rider's Club (USA only)	221
Reporting Safety Defects (USA only)	222

Authorized Manuals

The Service Manual (Publication Item No. 61MCF04) used by your authorized Honda dealer is available from Helm, Inc. (USA only, Canada: See your Honda dealer to order authorized manuals.)

Also available, but not necessary, to service your model is the Honda Common Service Manual (Publication No. 61CM001), which explains theory of operation and basic service information for various systems common to all Honda motorcycles, motor scooters and ATVs.

These Honda manuals are written for the professional technician, but most mechanically-capable owners should find them easy to use if they have the proper tools and observe proper safety standards. Special Honda tools are necessary for some procedures.

Publication Item No.	Description	Price Each*
61MCF04	2004 RC51 Service Manual	\$60.00
61CM001	Common Service Manual	\$48.00
31MCF640	2004 RC51 Owner's Manual	\$16.00

** Prices are subject to change without notice and without incurring obligation.*

214 Consumer Information

Order On-Line: www.helminc.com

Order Toll Free: 1-888-CYCLE93 (1-888-292-5393)

(NOTE: For Credit Card Orders Only)

Monday — Friday 8:00 AM — 6:00 PM EST

OR

By completing this form you can order the materials desired. You can pay by check or money order, or charge to your credit card. Mail to Helm, Inc. at the address shown on the back of this order form (USA only).

Canada: See your Honda dealer to order authorized manuals.

Publication Item No.	Item Description	Qty.	Price Each*	Total Price
*Prices are subject to change without notice and without incurring obligation. Orders are mailed within 10 days. Please allow adequate time for delivery.		Sub Total		
		Mich. Purchasers		
		Add 6 % Sales Tax		
		Handling Charge		\$4.00
		Grand Total		

Consumer Information 215

SHIP TO

NOTE: Dealers and Companies please provide dealer or company name, and also the name of the person to whose attention the shipment should be sent.

Customer Name _____ Attention _____
 Street Address - No P. O. Box Number _____ Apartment Number _____
 City _____ State _____ Zip Code _____
 Daytime Telephone Number () _____

PAYMENT

☐ Check or money order enclosed payable to Helm Inc.
 U.S. funds only. Do not send cash. ☐ Check here if your billing address is different from the shipping address shown above.

☐ MasterCard Account Number _____ Expiration: Mo. Yr. _____
☐ VISA _____
☐ Discover _____

Customer Signature _____ Date _____

These Publications cannot be returned for credit without receiving advance authorization within 14 days of delivery. On returns, a restocking fee may be applied against the original order.

HELM P.O. BOX 07280, DETROIT, MICHIGAN 48207

Your new Honda is covered by these warranties:

- Motorcycle Limited Warranty
- Exhaust Emission Warranty
- Noise Control Warranty

There are responsibilities, restrictions, and exclusions which apply to these warranties. Please read the Warranties Booklet given to you by your Honda dealer at the time of purchase. Be sure to keep your Honda owner's card with your Warranties Booklet (USA only).

It is important to realize that your warranty applies to defects in material or workmanship of your Honda. Your warranty coverage does not apply to normal wear or deterioration associated with using the motorcycle.

Your warranty coverage will not be voided if you choose to perform your own maintenance. However, you should have the proper tools and service information and be mechanically qualified. Failures that occur due directly to improper maintenance are not covered.

Almost all of your warranty coverage can be extended through the Honda Protection Plan (USA only). For more information, see your Honda dealer.

Warranty Service

Please remember that recommended maintenance interval servicing is not included in your warranty coverage. Additionally, your warranty does not apply to the normal wear of items (such as brakes, tires, etc.).

If you believe you have a problem with your motorcycle, call the service department of your Honda dealer. Make an appointment for an inspection and diagnosis. Remember, as the owner of the motorcycle, you will be asked to authorize that inspection. Your dealer will give you the results of the inspection. If the problem is covered under warranty, your dealer will perform the warranty repairs for you.

If you have questions about warranty coverage or the nature of the repair, it is best to talk to the service manager of your Honda dealer.

Sometimes, in spite of the best intentions of all concerned, a misunderstanding may occur. If you aren't satisfied with your dealer's handling of the situation, we suggest you discuss your problem with the appropriate member of the dealership's management team. If the problem has already been reviewed with the Service Manager, *Parts Manager*, *Sales Manager*, etc., contact the Owner of the dealership or their designated representative.

Your owner's manual was written to cover most of the questions you might ask about your Honda. Any questions not answered in the owner's manual can be answered by your Honda dealer. If your dealer doesn't have the answer right away, they will get it for you.

If you have a difference of opinion with your dealer, please remember that each dealership is independently owned and operated. That's why it's important to work to resolve any differences at the dealership level.

If you wish to comment on your experiences with your Honda or with your dealer, please send your comments to the following address (USA only):

Motorcycle Division, American Honda Motor Co., Inc., P.O. Box 2220, Torrance, CA 90509-2220, mailstop: 100-4W-5B, telephone: (310) 532-9811.

Canada: Refer to the Warranties Booklet that was supplied with your vehicle.

Please include the following information in your letter:

- name, address, and telephone number
- product model, year, and frame/VIN serial number
- date of purchase
- dealer name and address

We will likely ask your Honda dealer to respond, or possibly acknowledge your comments directly.

Your Honda Dealer

Once you purchase your new Honda, get familiar with the organization of your Honda dealer so you can utilize the full range of services available.

The service department is there to perform regular maintenance and unexpected repairs. It has the latest available service information from Honda. The service department will also handle warranty inspections and repairs.

The parts department offers Genuine Honda parts, Pro Honda products, Hondaline accessories (USA only), and Honda accessories and products (Canada only). The same quality that went into your Honda can be found in Genuine Honda replacement parts. You'll also find comparable quality in the accessories and

products available from the parts department.

The sales department offers the Honda Protection Plan to extend almost all of your warranty coverage (USA only). Your Honda dealer can inform you about competition and other riding events in your area. You'll also find that your dealer is a source of information about American Honda's Rider Education Centers and the Honda Rider's Club of America (USA only).

We're sure you'll be as pleased with the service your Honda dealer continues to provide after the sale as you are with the quality and dependability of your Honda.

The Honda Rider's Club (USA only)

One of the best ways to get the most enjoyment from owning your Honda is to join the Honda Rider's Club of America (HRCA). Your purchase of a new motorcycle, scooter or ATV from a participating Honda dealer entitles you to a complimentary one-year membership. The HRCA has hundreds of dealer-sponsored chapters throughout the USA. Some of the HRCA membership benefits include:

- 24-hr. emergency roadside assistance for your Honda or transport vehicle.
- Transportation for your Honda or transport vehicle to the nearest Honda dealer or service facility if roadside assistance can't get you going again.
- Reimbursement (to \$75) for motorcycle and scooter rider training from the Motorcycle Safety Foundation. Free

ATV rider training is available from the Specialty Vehicle Institute of America with the purchase of a new Honda ATV.

- A subscription to *Honda Red Rider*, a bi-monthly insider's magazine for all members.
- Special members-only HRCA website.
- Discounts from HRCA partners for both on and off-road riding schools and adventure packages.
- Hospitality at national events.
- Optional insurance, club pin, patch, etc.

Contact your Honda dealer for more information or call: 1-800-847-HRCA. For a complete list of all HRCA benefits and services, refer to your HRCA membership benefits manual or visit our website at www.honda.com.

Reporting Safety Defects (USA only)

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying American Honda Motor Co., Inc.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or American Honda Motor Co., Inc.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590.

You can also obtain other information about motor vehicle safety from the Hotline.

Table of Contents

The following presents the contents of each section of your owner's manual.

MOTORCYCLE SAFETY	1
Important Safety Information	2
Accessories & Modifications	5
Safety Labels	7
 INSTRUMENTS & CONTROLS	 9
Component Locations	10
Gauges, Indicators & Displays.....	13
Multi-function Display.....	19
Coolant Temperature Meter.....	20
Speedometer	22
Odometer	22
Tripmeter	22
Changing the Speed Unit	23
Controls & Features	
Choke Knob.....	24
Ignition Switch	25

Start Button.....	26
Engine Stop Switch	26
Headlight Dimmer Switch	27
Turn Signal Switch.....	27
Horn Button	28
Multi-function Select and Reset Button	28
 BEFORE RIDING.....	 29
Are You Ready to Ride ?	30
Protective Apparel.....	30
Rider Training	32
Is Your Motorcycle Ready to Ride ?	33
Pre-ride Inspection	33
Load Limits & Guidelines.....	36
Loading	36
Load Limits	37
Loading Guidelines	37

Table of Contents

BASIC OPERATION & RIDING.....	39
Safe Riding Precautions	40
Starting & Stopping the Engine	41
Preparation.....	41
Starting Procedure	42
Flooded Engine.....	44
Bank Angle Sensor Ignition Cut-off System.....	45
How to Stop the Engine	46
Shifting Gears.....	47
Braking	49
Parking	51
Riding with a Passenger or Cargo.....	55
SERVICING YOUR HONDA	57
<i>Before You Service Your Honda</i>	
The Importance of Maintenance.....	60
Maintenance Safety	61
Important Safety Precautions.....	62
Periodic Maintenance	64
Maintenance Schedule	66
Maintenance Record.....	71
<i>Service Preparations</i>	
Component Locations	73
Tool Kit.....	76
Owner's Manual Storage.....	77
Seat Removal.....	78
Rear Cowl Removal	81
Lower Fairing Removal	82
Inner Fairing Removal	84
Raising the Fuel Tank	85

(cont'd)

Table of Contents

SERVICING YOUR HONDA (cont'd)

Service Procedures

Fluids & Filters

Fuel	86
Engine Oil & Filter	89
Coolant	99
Crankcase Breather	103

Engine

Throttle	104
Clutch System	106
Engine Idle Speed	109
Spark Plugs	111

Chassis

Suspension	115
Brakes	124
Tires	130
Side Stand	137

Drive Chain	138
-------------------	-----

Electrical

Battery	145
---------------	-----

Appearance Care	150
-----------------------	-----

TIPS..... 157

Storing Your Honda	158
--------------------------	-----

Transporting Your Motorcycle	161
------------------------------------	-----

You & the Environment	162
-----------------------------	-----

Table of Contents

TAKING CARE OF THE UNEXPECTED 163	CONSUMER INFORMATION 213
General Guidelines 164	Authorized Manuals 214
If Your Engine Quits or Won't Start ... 165	Warranty Coverage 217
If You Have a Flat Tire 170	Warranty Service 218
If Your Engine Overheats 183	Contacting Honda..... 219
If the Low Oil Pressure Indicator	Your Honda Dealer 220
Lights 185	The Honda Rider's Club
If a Fuse Blows..... 186	(USA only) 221
If You Crash 190	Reporting Safety Defects
If You Lose Your Key 191	(USA only) 222
If Your Battery is Low (or Dead) 192	TABLE OF CONTENTS 224
TECHNICAL INFORMATION 193	INDEX 228
Vehicle Identification..... 194	QUICK REFERENCE
Specifications 197	
Break-in Guidelines..... 204	
Emission Control Systems 205	
Oxygenated Fuels 211	

Index

A

accessories 5
air pressure,tires..... 131
American Honda, contacting..... 219
apparel, protective 30
appearance care 150

B

bank angle sensor 45
battery 145
brakes,
 fluid..... 125
 front lever adjustment 124
 pad wear..... 128
braking 49
break-in guidelines 204

C

capacity, fuel 87
care, appearance 150
chain, drive 138
cleaning, appearance care 150
clutch system 106
color label 196
compartment,
 owner's manual 77
 tool kit..... 76
component locations,
 indicators and controls 10
 maintenance..... 73
consumer information 213
coolant..... 99
coolant temperature meter..... 20

cover,
 rear seat 79
 customer service 219

D

damping, suspension, rear 124
 defects, safety 222
 display,
 check 15
 multi-function 19
 drive chain 138

E

emission control systems 205
 engine,
 flooded 44
 idle speed 109
 low oil pressure 185

number 194
 oil 89
 overheats 183
 pinging 86
 starting 41
 stop switch 26
 stopping 46
 won't start 165
 environment 162

F

fairing removal,
 inner 84
 lower 82
 flat tire 170
 flooded engine 44
 frame number 195

Index

fuel,	
oxygenated.....	211
recommendation	86
tank raising	85
tank capacity	87
fuses	186

G

gap, spark plug.....	113
gasohol.....	211
gasoline	86
gauges, indicators & displays.....	13

H

headlight dimmer switch	27
helmet holder	52
high beam indicator	18
Honda,	

contacting	219
Rider's Club.....	221
dealer.....	220
Honda service manual	214
horn button.....	28

I

identification, vehicle.....	194
idle speed, engine	109
ignition cutoff system,	
bank angle.....	45
side stand	41
ignition switch	25
indicators.....	13
inner fairing removal	84
inspection, pre-ride	33

K

key, lost 191
kit, tool 76

L

labels, safety 7
lamp check 14
limit, weight 37
load limits 37
loading guidelines 37
location, components,
 indicators & controls 10
 maintenance 73
lock, steering 52

M

maintenance,
 importance 60
 periodic 64
 record 71
 safety 61
 schedule 66
manual, service 214
maximum weight limit 37
modifications 6

N

numbers, serial 194

Index

O

odometer 13, 22
oil,
 engine 89
 low pressure 185
operating controls 25
overheat, engine 183
owner's manual storage 77
oxygenated fuels 211

P

parking 51
pinging, engine 86
plugs, spark 111
pre-load, suspension
 front 117
 rear 121

pre-ride inspection 33
problems, unexpected 163
protective apparel 30

R

removal,
 inner fairing 84
 lower fairing 82
 seat 78
reporting safety defects 222
rider training 2, 32
Rider's Club, Honda 221

riding,	
basic operation.....	39
clothing	30
precautions.....	40
safety.....	2
safety precautions.....	40
with passenger or cargo.....	55

S

safety,	
important precautions.....	62
labels.....	7
reporting defects.....	222
riding precautions.....	40
schedule, maintenance.....	66
seat removal.....	78
sensor, bank angle	45
serial numbers.....	194

service,	
customer.....	219
manuals.....	214
warranty	217
shifting gears	47
side stand	137
side stand ignition cutoff system	41
spark knock.....	86
spark plugs.....	111
specifications.....	197
speedometer.....	13, 22
stand, side	137
start button	26
starting,	
engine.....	41
troubleshooting.....	165
steering lock.....	52
stop switch, engine	26
stopping engine.....	46

Index

storage,
 motorcycle 158
 owner's manual 77
suspension,
 front suspension adjustment..... 116
 front suspension spring pre-load..... 117
 rear suspension adjustment 120
 rear suspension spring pre-load..... 121
 rear suspension damping 122
switch,
 engine stop..... 26
 headlight dimmer..... 27
 ignition..... 25
 turn signal 27

T

tachometer 13, 16
temperature meter,
 coolant..... 20
theft prevention tips..... 53
throttle 104
tires,
 air pressure..... 131
 flat..... 170
 replacing 134
tool kit 76
training, rider 2, 32
transporting your motorcycle 161
tripmeter..... 13,22

trouble, unexpected 164
troubleshooting, starting 166
turn signal indicators 16

V

vehicle identification no. (VIN)..... 194

W

warranty,
 coverage 217
 extended 217
 service 218
washing your motorcycle 152
weight limit 37
wheels,
 front removal 173
 rear removal 179

The following is a brief, but important collection of information you need to know about your Honda. You'll also find space to record important notes.

How To Avoid Costly Repairs

The engine of your Honda can be the most expensive component to repair. Proper maintenance, especially the use of the recommended fluids and filters, prevents premature wear and damage.

Frequent causes of costly repairs are:

- Engine oil: insufficient quantity, improper oil.
- Air cleaner: dirty, leaking because of improper installation (poor seal).

Record important information on the following page:

Quick Reference

VIN/Frame No.	
Engine No.	
Frame No.	
Ignition Key No.	
Color Label	
Owner's Name	
Address	
City/State	
Phone	
Dealer's Name	
Address	
City/State	
Phone	
Service Mgr.	

Quick Reference

Quick Reference

Scheduled Maintenance	Initial: 600 miles (1,000 km) Regular: every 4,000 miles (6,400 km)
Pre-ride Inspection	Check the following items each time before you ride (page 33): tires, chain, leaks, loose parts, throttle, brakes, indicators, lights.
Periodic Checks	Check the following items monthly: tires (page 65), fluids (engine oil, coolant, brake fluid, clutch fluid), lights.
Fuel/Capacity	unleaded gasoline, pump octane number 92 or higher 4.76 US gal (18.0 ℓ)
Engine Oil	API Service Classification SG or higher except oils labeled as energy conserving on the circular API service label, SAE 10W-40, JASO T 903 standard MA, Pro Honda GN4 or HP4 (without molybdenum additives) 4-stroke oil or equivalent
Maximum Weight Capacity	366 lbs (166 kg) 375 lbs (170 kg) Canada rider, passenger, all cargo and accessories

Quick Reference

Quick Reference

Tires	Front: 120/70 ZR17M/C (58W) DUNLOP D208FN or METZELER MEZ3H FRONT RACING Rear: 190/50 ZR17M/C (73W) DUNLOP D208N or METZELER MEZ3H RACING
Tire Pressure (cold)	Front: 36 psi (250 kPa , 2.50 kgf/cm ²) Rear: 42 psi (290 kPa , 2.90 kgf/cm ²)
Spark Plugs	standard: IFR9H11 (NGK) or VK27PRZ11 (DENSO) cold climate: IFR8H11 (NGK) or VK24PRZ11 (DENSO)
Coolant	ethylene glycol antifreeze (silicate-free) for aluminum engines in 50/50 solution with Pro Honda HP Coolant or an equivalent distilled water
Fuses	main A: 30A main B: 30A other: 20A , 10A

Quick Reference

HONDA
The power of dreams™



31MCF640
00X31-MCF-6400

英 ㊞ (HC) 2000.2003.10.4
PRINTED IN JAPAN
